

Keep This Manual Handy For Quick Reference

SuperMax[®] BY LAGUNA **OWNERS'S MANUAL**

SuperBrush 24 & 36



shown with optional accessories

**IMPORTANT: BEFORE OPERATING YOUR SUPERBRUSH READ THE INSTRUCTIONS
IN THIS MANUAL FOR UNPACKING AND SETTING UP YOUR MACHINE.**

LAGUNATOOLS.com

SUPMX-91267
SUPMX-91367

LAGUNA

CSA
C US
256540

CONGRATULATIONS

You have made a wise purchasing decision by adding this “Made In USA” machine to your tool line-up. The main purpose in inventing and developing the machine you’ve purchased was to bring a new dimension of productivity to your workshop, be it large or small. Right from the start, our goal at SuperMax Tools has been to manufacture equipment that is capable of providing you with maximum economy, maximum utility, and maximum performance.

Your SUPERBRUSH will pay you back many fold in the years ahead by helping you get better results in less time, start to finish. This tool incorporates a bundle of exclusive features which you will appreciate more every time you use it. All SuperMax Tools brush sanders feature a variable brush speed (RPM) and the exclusive variable-speed power feed conveyor system. Together, they provide you with ultra-precise control, for a variety of applications.

SuperMax Tools and its dealers are committed to providing you with innovative solutions, from selecting the right machine to helping you get top performance when you put it to work in your shop. Regardless of how you take advantage of these innovations, we are confident our equipment will help bring you a giant step forward in precision shop productivity.

Revision: R01 V02 12/31/2025

LAGUNATOOLS.COM

CAUTION, SAFETY FIRST

When maintaining and operating this machine, always put safety first. For your own safety, read and understand this owner’s manual before operating this machine. Always heed and follow all normal safety precautions, including the following:

- **Always wear eye protection while operating the sander.**
- **Always feed stock against the brush rotation.**
- **Never place hands or fingers under the brush or dust cover.**
- **Keep hands and clothing away from operating brush.**
- **Never operate the sander without its dust cover or pulley guarding in place.**
- **Always maintain control of boards to avoid kickback; know how to prevent it.**
- **Always disconnect electrical power before doing any servicing or adjusting of the machine.**

MODEL IDENTIFICATION

Your SUPERBRUSH sander is one of a family of machines from SuperMax Tools designed to help you achieve results comparable to industrial-size sanders at a fraction of the cost. The SUPERBRUSH is available in 24” or 36” sizes. For future reference, find the model and serial numbers on the table mount bracket (#42, page 30) and write them in below.

Model: _____

Serial Number: _____

Date Purchased: _____

Dealer: _____

IMPORTANT : KEEP THIS MANUAL HANDY

Please read this manual first. It was designed to help you get the most from your SUPERBRUSH sander. Before unpacking or using the machine, familiarize yourself with its components, features, and basic adjustments by reviewing the following

pages. You will find it an invaluable aid in setting up, operating and servicing your machine. If, after reviewing this manual, you still have a problem you can’t solve, please call your SuperMax Tools dealer.

CONTENTS

ABOUT THE SUPERBRUSH SYSTEM

SUPERBRUSH Nomenclature	4
Unpacking Your SUPERBRUSH Sander	5

SETTING UP YOUR SUPERBRUSH

Making Electrical Connections	6
Connecting Dust Collectors	7
Checking For Machine Level	7
Checking Brush Alignment	7
Checking Table Height Controls	7
Brush Speed Adjustment	8
Checking Conveyor Belt	8

OPERATING YOUR SUPERBRUSH

Basic Operating Procedures	9
Adjusting Tension Rollers	9
SUPERBRUSH Operating Controls	9
Setting Depth of Cut	10
Selecting Stock Feed Rates	10
Using The Depth Gauge	11
Monthly Maintenance	11

TIPS FOR MAXIMUM

PERFORMANCE	12
-------------------	----

TROUBLESHOOTING YOUR SUPERBRUSH

Troubleshooting Guide: Motors	13
Troubleshooting Guide: Conveyor	14
Troubleshooting Guide: Machine	15

SERVICING YOUR SUPERBRUSH

Adjusting Height Controls	16
Adjusting Table Support Castings	16
Adjusting Brush Head	16
Leveling Table	18
Miter Gear Alignment	18
Brush Speed Adjustment	19
Replacing Brush	20 & 23
Replacing Conveyor Belts	20
Replacing V-Belt	21
Rotating/Replacing Bearings	22
Replacing Electrical Components	24
Electrical Diagrams	25 & 26

SUPERBRUSH TECHNICAL DATA

SUPERBRUSH Specifications	27
Parts List For Stand	28
Parts List For Brush Assembly	31
Parts List For Conveyor Assembly	34
SUPERBRUSH Accessories & Supplies	38

SAFETY RULES

FOR YOUR SAFETY: Read all instructions carefully, and note the safety cautions on the opposite page and on the back cover of this manual.

ABOUT THE SUPERBRUSH SYSTEM

This manual is designed to help familiarize you with your SUPERBRUSH sander, and to help you take advantage of its exclusive features. By understanding its major components, and how they work together, you will be able to get the most from your investment. The SUPERBRUSH system is basically made up of: 1) a height adjustment handle

which raises and lowers the conveyor table; 2) a brush speed control handle which controls brush speed from 400 to 1200 RPM; 3) a motor starter switch which starts and stops the drive motor and sanding brush; and 4) a feed rate control knob which starts feed conveyor and selects feed rate from 0-15 feet per minute.

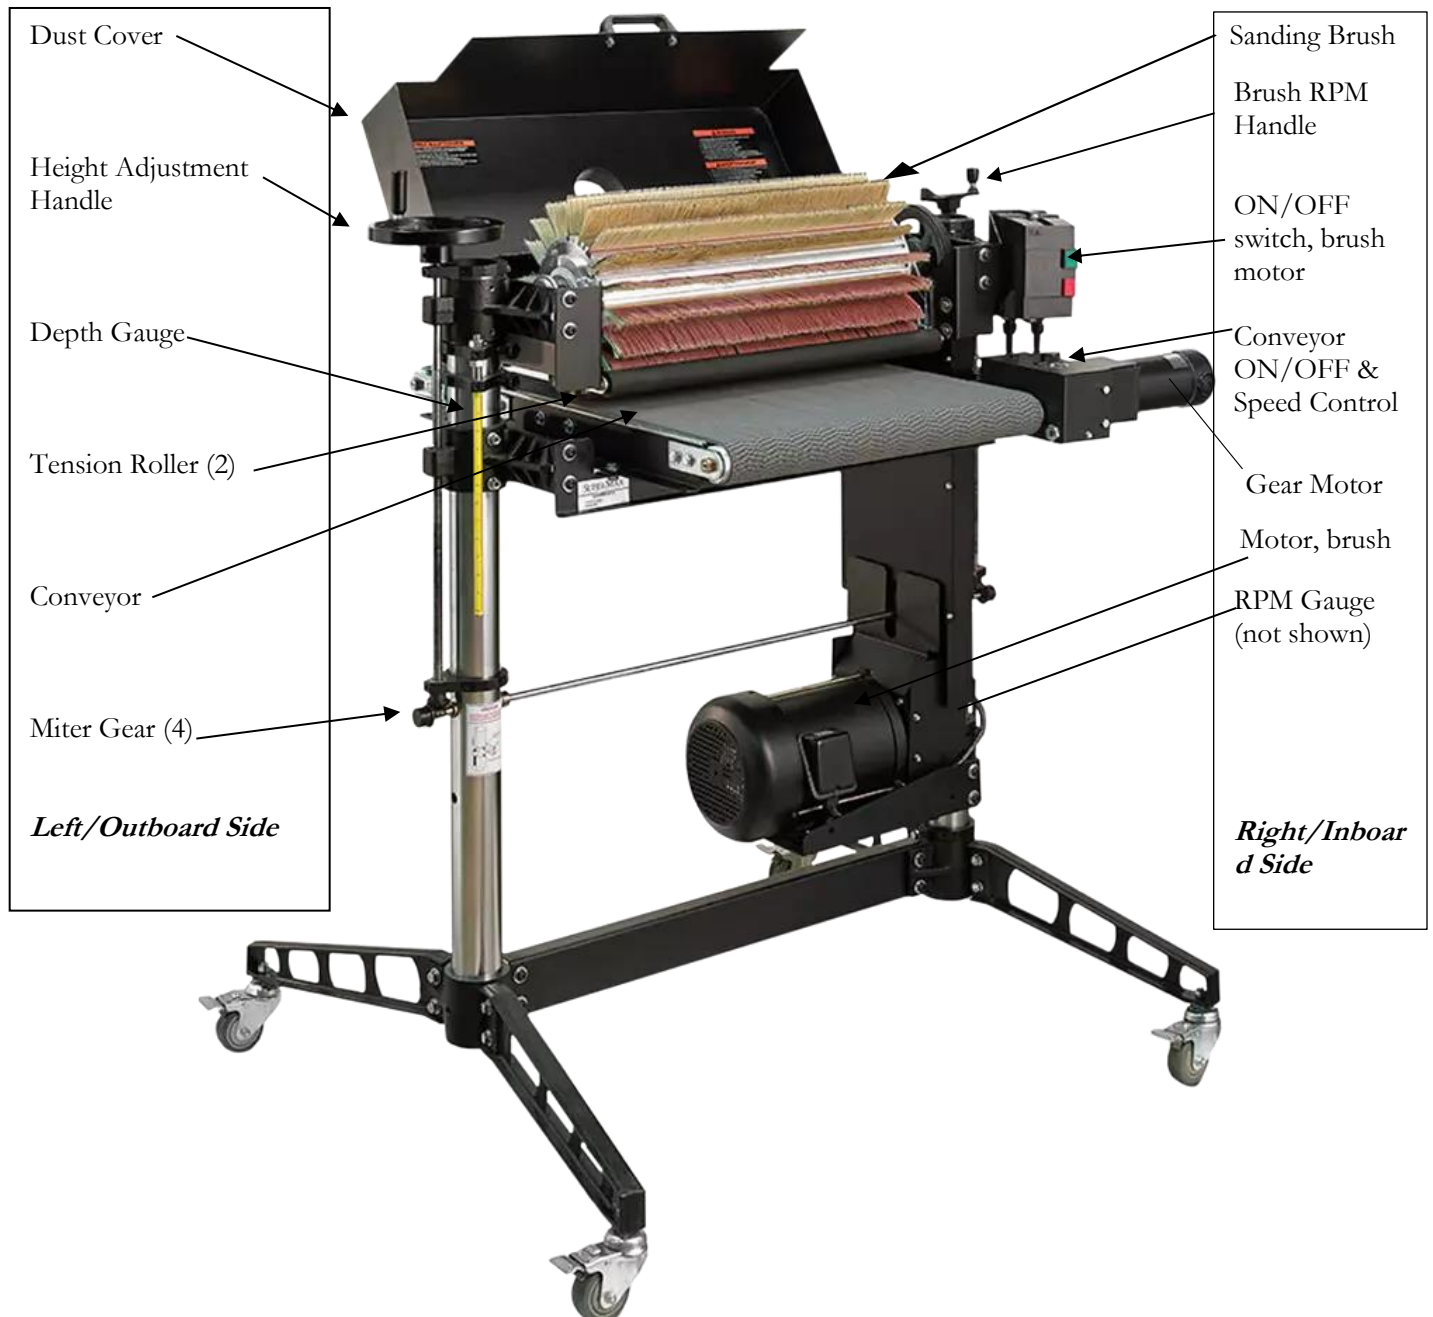


Fig. 1. SUPERBRUSH nomenclature.

UNPACKING YOUR SUPERBRUSH

Your SUPERBRUSH sander has been shipped completely assembled from the factory in a shroud on a pallet and shrink-wrapped in plastic. If any damage has occurred as a result of shipment, notify the transportation company as soon as possible and ask them to make an immediate inspection. Ask for a damage or loss report. Also notify your dealer of any loss or damage during shipment. See enclosed Warranty Statement.

Important: To avoid problems and potential damage to the machine, please read through the unpacking instructions below before proceeding to set up the machine in your shop.

1. Unbolt the machine legs from the shipping pallet. Install the rubber-based leveling feet or optional caster set on legs (Fig. 2). The feet and mounting hardware are in the **STOP** bag packed with your machine.

2. Loosen the hex nuts and set screws on the table support castings (Fig. 3) and on the motor support casting (7)(Fig. 5). The set screws on the table support castings have been tightened at the factory to eliminate free-play between the castings and the column tube during shipment. There are two table support castings on the SUPERBRUSH, one each for the right and left column tubes, and one motor support casting, all with set screws.

Important: These set screws are tightened for shipping and must be loosened and readjusted before operating either the height adjustment mechanism or the brush speed control handle.

To properly adjust for operation, loosen each set screw by first loosening its hex nut with a wrench

and then the set screw with an Allen wrench. Then retighten each set screw with your fingers so it only lightly touches the column tube. Hold each set screw in position with an Allen wrench and retighten the hex nut. Failure to follow these procedures may result in misalignment of the brush and/or the conveyor table.

Caution: Do not loosen the set screws on the upper brush support castings.

Note: Some machines have a block of wood under the main motor. If so, remove at this time.

3. Install the conveyor gear motor. Rotate the drive roller on the conveyor system so the flat part of the shaft is down. If necessary, connect the conveyor motor into an appropriate AC outlet (see page 6, "Making Electrical Connections"), to rotate the motor output shaft coupling so the set screws face downward. Disconnect electrical supply. Slide the conveyor motor assembly onto the drive roller shaft, aligning the shaft coupling and four mounting holes. Start the four 5/16" hex head bolts on the conveyor motor mounting bracket, but do not tighten yet.

Next, tighten the set screws in the coupling on the drive roller shaft, making sure they are on the flat of the shaft. Rock the drive roller while tightening the set screws to make sure they are centered properly on the flat. Install the bottom cover on the control box with two screws. Then connect power to machine and turn conveyor on full speed. While it is running, tighten the four 5/16" bolts to secure the conveyor motor assembly in place.



Fig. 1-1. Caster and mounting hardware.

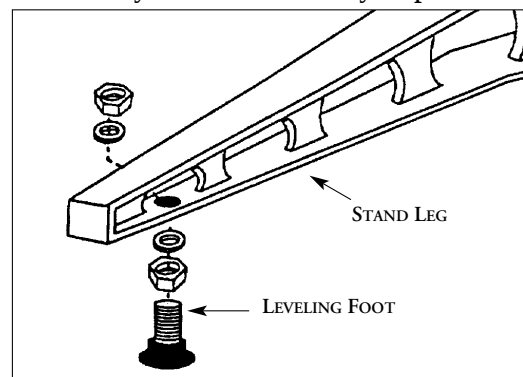


Fig. 2. Leveling foot and mounting hardware.

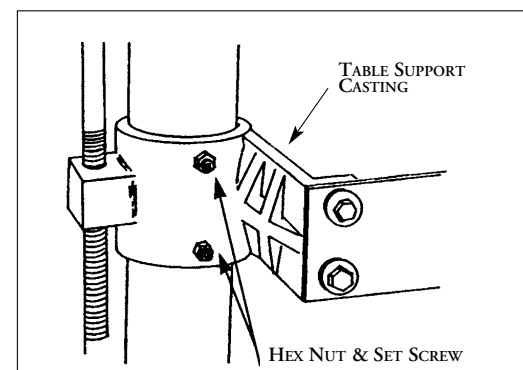


Fig. 3. Table support casting and set screws.

SETTING UP

Your SUPERBRUSH was adjusted and aligned at the factory, and it has been carefully packed for shipment. However, because of possible stress during transit, the unit should be thoroughly checked before use. This section covers the pre-operational checks you should make after unpacking and final assembly. Unnecessary problems can be avoided if these essential checks are performed before operating the sander. Likewise, performing the recommended monthly maintenance procedures listed at the end of this section will help assure trouble-free service.

MAKING ELECTRICAL CONNECTIONS

A cord and plug are not included. Consult with an electrician and confirm all applicable electrical codes before wiring. Please see wiring diagrams for details.

Single Phase: The sanders are powered by a 5 HP, 208- 230 volt, single phase motor. A plug and cord is not supplied. Single phase sanders require a minimum dedicated circuit of 10-gauge wire protected by a 30-amp fuse or breaker. Extension cords are not recommended, but if used, should be of at least 10-gauge wire for lengths up to 10' and of at least 8-gauge wire for longer lengths.

Views of junction box (under conveyor motor) with cord installed.

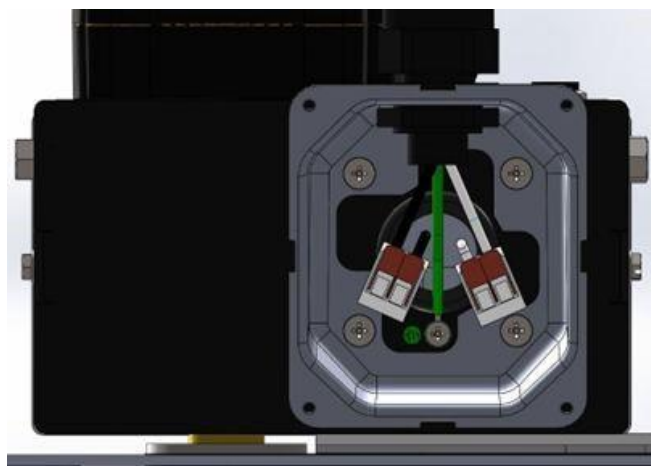


Fig. A. Installed Wiring

Remove the cover of the conduit box, located on the underside of the conveyor motor housing, by removing the screws securing the cover.

1. Loosen (do not remove) the tension nut of the strain relief bushing.
2. Feed the new cord through the strain relief bushing.
3. Attach the first HOT (black) wire to the terminal, by lifting the orange clamp, inserting the bare wire. Press down on the orange clamp to secure wire. Attach the second HOT (red, or white*) in the same manner. See Figs. A & B.

CAUTION: Confirm the wire is secure in the terminal clamp and there is no exposed non-insulated wire!

4. Attach the GROUND (green or green & yellow) to the ground screw of the conduit box. Confirm the wire is secure.
5. Tighten strain relief nut. Confirm the power cord is secure.
6. Confirm all electrical connections are secure and tight. Confirm wires are within conduit box and will not be pinched.
7. Re-attach conduit box cover and secure with screws.

*Follow NEMA/local codes when using "white" as HOT.



Fig. B. Installed Wiring

CONNECTING DUST COLLECTORS

Dust collection is necessary for all SUPERBRUSH models. The SUPERBRUSH 24 is equipped with one 4" diameter dust exhaust port at the top of the brush cover. The SUPERBRUSH 36 has two 4" dust exhaust ports.

To attach the SUPERBRUSH to your collection system, install 4" hose from your collector. (See Tips For Maximum Performance, page 12 of this manual.) The minimum recommended dust collector capacities at the dust port(s) are: SUPERBRUSH 24: 600 CFM; SUPERBRUSH 36: 1,200 CFM. For best results, follow the recommendations of the manufacturer of your dust collection equipment. **NOTE:** Some applications will require more dust collection than the recommended minimum CFM.

CHECKING MACHINE FOR LEVEL

Proper leveling of the machine is essential to achieve continued maximum performance from the SUPERBRUSH. Before making fine adjustments, place the unit where it will be used in the shop. Then adjust the four leveling feet using a carpenter's level both across the machine and in line with the machine, placing the level on the conveyor bed. If you have equipped your SUPERBRUSH with the optional caster set, do the same after positioning the machine where it will be operated most often. Mark the position of the legs on the floor with tape so it can be returned to the same position.

HEIGHT ADJUSTMENT

The table height is controlled by the height adjustment handle (10)(Fig.5). Turning the handle raises or lowers both sides of the table simultaneously by transferring the handle rotation through the miter gear and transfer rod assembly. One revolution of the handle raises or lowers the table $\frac{3}{32}$ of an inch.

Before operating height adjustment, be sure both set screws located in both table support castings (Fig. 3) are loose to allow table support to slide on both column tubes. (These set screws are tightened for shipping.)



Fig. 6. Checking brush alignment and table height adjustment (outboard side).

BRUSH ALIGNMENT

The brush must be parallel to the conveyor bed surface. Brush alignment can be visually checked by raising the tension rollers (Fig. 6) to their highest position (See Tension Roller Adjustment page 9) and raising the table so that the brush just contacts the conveyor surface. Brush contact should be

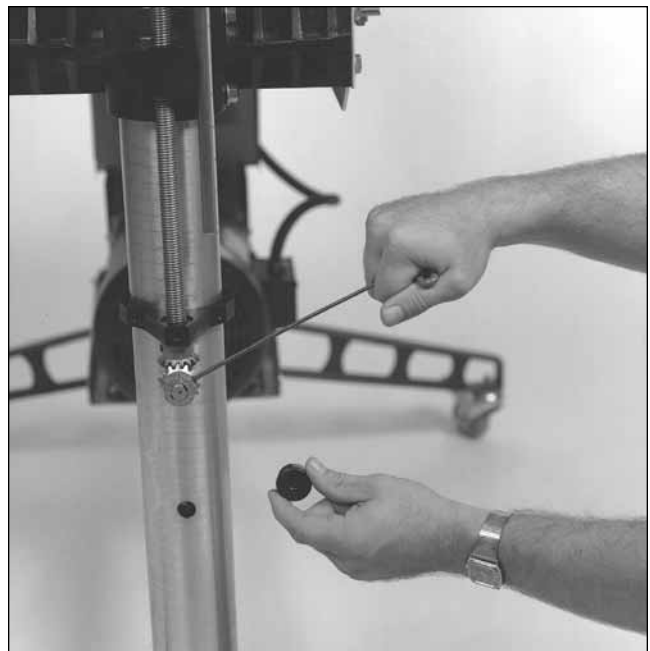


Fig. 7. Adjusting brush alignment.

equal across the width of the conveyor. If the SUPERBRUSH is properly leveled (See checking machine for level), brush misalignment can be corrected by loosening the two set screws at the front of the outboard brush support casting (Fig. 5) and by raising or lowering casting to correct alignment.

NOTE: Improper brush alignment will cause uneven results and lead to reduced brush life.

BRUSH SPEED ADJUSTMENT

The SUPERBRUSH is equipped with a variable speed drive which allows the brush to be operated anywhere between 400 and 1200 RPM. The faster the brush speed, the more aggressive the brush action. The brush speed control handle (1)(Fig. 5) raises or lowers the motor support casting (7)(Fig. 5) which activates the variable speed drive pulley.

RPM GAUGE

The RPM gauge (Fig. 8) displays the brush speed and is read where the scale intersects the top of the screw support casting. To calibrate the gauge, lower the motor to the lowest position. Loosen both hex nuts while holding set screws. Position the RPM scale so that "400" RPM intersects the top of the screw support casting (Fig. 8). Tighten hex nuts to hold gauge in this position.

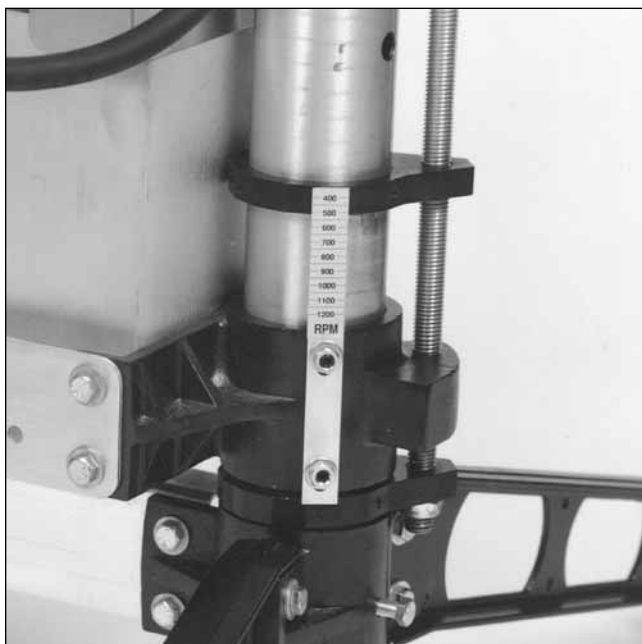


Fig. 8. Brush RPM gauge.

CHECKING THE CONVEYOR BELT

Conveyor belt tracking adjustments may occasionally be necessary during break-in and normal operation to compensate for belt stretching. If adjustments are necessary, follow the instructions below:

Belt tracking adjustments are made while the conveyor belt is running. With the conveyor unit on and set at the fastest speed setting, watch for a tendency of the conveyor belt to drift to one side of the conveyor. To adjust the belt tracking, tighten the take-up screw nut (see Fig. 9) on the side the belt is drifting toward, and loosen the take-up screw nut on the opposite side. Adjusting the take-up screw nuts on either side of the conveyor allows belt tracking adjustments to be made without affecting belt tension. Adjust the take-up screw nuts only 1/4 turn at a time. Then allow time for the belt to react to the adjustments before proceeding further. Try to avoid over-adjustments.

NOTE: Make sure wrench is below surface when brushing.

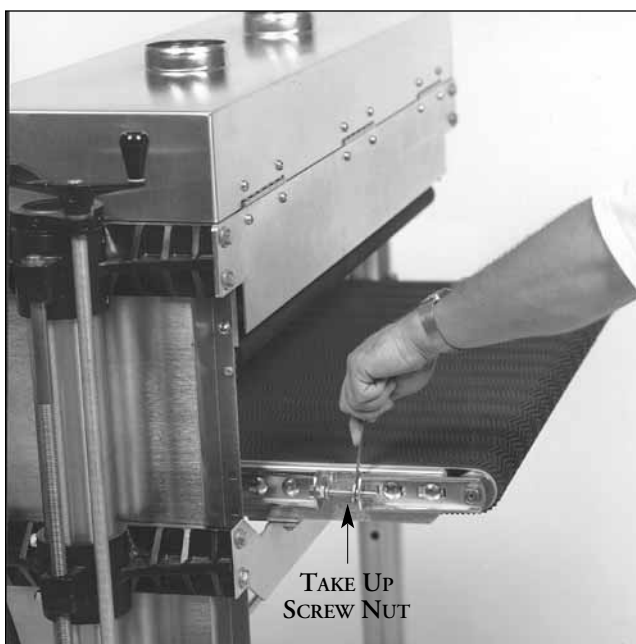


Fig. 9. Adjusting conveyor belt tracking.

OPERATING YOUR SUPERBRUSH

Before using your SUPERBRUSH, review the previous pages in this manual on initial set-up and adjustment. In this section, you will learn how to operate the machine. Note that connecting the machine to an adequate dust collection system is necessary before operating the unit.

The SUPERBRUSH offers considerable control and versatility through infinitely variable brush speed and feed rate. Experiment with both to find the proper sander performance for a given application. Varying the brush speed makes the brush more or less aggressive. Too aggressive on the brush may tend to raise the grain or round edges. Sometimes it may be better to make two or more passes with a less aggressive brush or setting.

The brush is rotating against the direction of feed; therefore, the leading edges of contours will receive more sanding than trailing edges. Stock should be reversed on subsequent passes to sand all surfaces. Stock may also be fed at an angle to allow more brush penetration on the sides.

BASIC OPERATING PROCEDURES

After you have connected the machine to a dust collection system, you are ready to begin to use the

SUPERBRUSH. The basic operating procedure for the SUPERBRUSH models is as follows (Fig. 10):

1. Set depth of cut/bristle contact (page 10).
2. Set tension rollers to type of stock being sanded (See Tension Roller Adjustment below and Fig. 11)
3. Start sanding brush and select slow brush speed (page 8).
4. Start conveyor and select feed rate (page 10)
5. Start dust collector system.
6. Feed stock through unit.
7. Gradually increase brush speed until the desired finish is achieved (Fig. 8).

To feed stock through the SUPERBRUSH, rest and hold the stock to be sanded on the conveyor table, allowing the conveyor belt to carry the stock into the brush. Once the stock is halfway through, reposition yourself to the outfeed side of the machine to receive and control the stock as it exits the unit.

TENSION ROLLER ADJUSTMENT

Spring loaded infeed and outfeed Tension Rollers (Fig. 11) are provided to maintain downward pressure on stock being sanded and to prevent slippage of the stock on the feed conveyor. When properly set, the Tension Rollers should engage or raise up about 1/8" to accommodate the stock being brushed.

The Tension Rollers can and must be adjusted to accommodate flat surfaced stock vs highly contoured surface stock. If the Depth Gauge is properly calibrated (page 11), Tension Roller height is adjusted as follows: Note: Make sure brush head is appropriate for application and contact.

Flat Surfaced Stock: Set the bottom of the tension rollers even with the bottom of the brush. Loosen the four Tension Roller locking knobs (Fig. 11). Raise the table to the "0" mark on the Depth Gauge. At this position, the brush and Tension Rollers are resting on the table surface. Lock all four Tension Roller knobs. For example, to brush a 3/4" thick flat board, lower the table to 5/8" on the Depth Gauge. This allows 1/8" for Tension Roller engagement and 1/8" brush penetration.

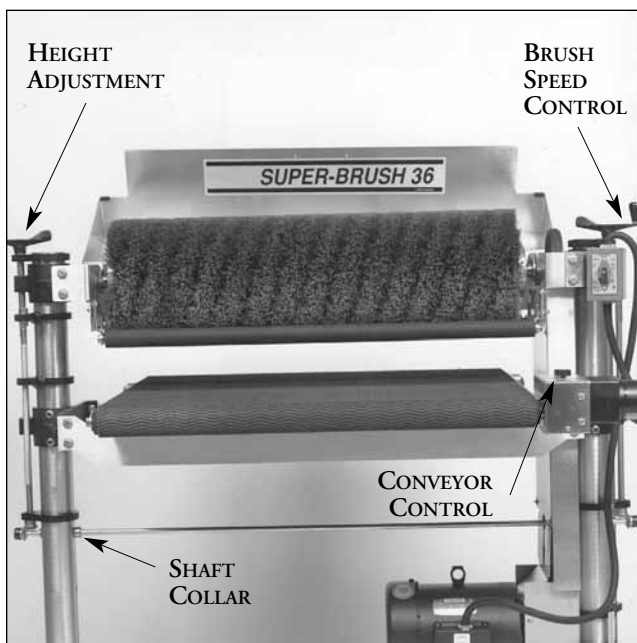


Fig. 10. Operating controls.

Contoured Surface Stock: (Example: A 3/4" thick piece of molding with 3/8" of molding relief.) Loosen all four tension roller locking bolts (Fig. 11). Adjust the conveyor table 1/4" into the bristle tips (measure with a ruler from "0" mark on depth gauge.). At this position, the tension rollers are resting on the table surface and are positioned 1/4" above the bottom of the brush. Lock all four Tension Roller locking bolts. To brush the piece, lower the table to the 3/8" position on the Depth Gauge. This allows for 1/8" of tension roller engagement and 3/8" of brush penetration.

SELECTING STOCK FEED RATES

Selecting the proper feed rate is essential to proper brushing. Feed rate controls the duration of brushing on a particular spot. A slower feed rate allows more brushing to occur. In some instances, a slow feed rate and slow brush speed may produce the same result as a fast feed rate and fast brush speed. The variable feed rate control of the conveyor belt adjusts the load on the machine; it can be infinitely adjusted for maximum operating performance. A faster feed rate allows faster brushing but fewer revolutions of the brush per inch of sanding. A slower feed rate provides more revolutions of the brush per inch of sanding (Fig. 10).

The best feed rate will depend on a number of factors, including type of stock, brush, depth of cut used, and whether the stock is fed directly in line with the conveyor bed or at an angle.

When using a wire brush for "distressing" wood, a brush speed of 400-600 RPM with light contact of bristles and a moderate feed rate generally leaves the best finish.

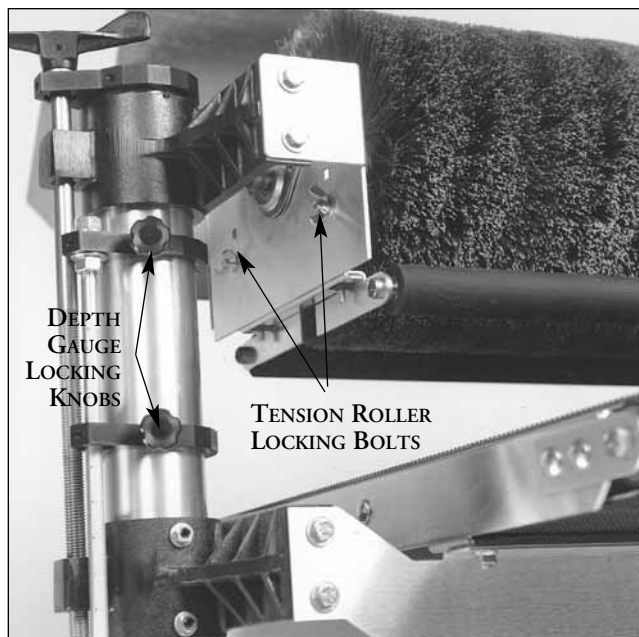


Fig. 11. Tension roller and depth gauge adjustment.

SETTING BRUSH DEPTH OF CUT/CONTACT

SuperMax Tools tests sample applications for all customers before selling a SUPERBRUSH. We recommend following the suggest RPM, contact and conveyor settings outlined in the sample letter. If you have questions about your application(s) or your needs change, please contact SuperMax Tools for updated information or new sample testing, as brush types, materials, etc. may have changed.

The information and suggestions listed below are not specific to any application and may have changed since printing. Please call SuperMax Tools if you have questions.

When a nylon or wire brush is worn and needs changing, the bristles will either have fractured and the brush head looks "bald" or the bristle length has worn and the bristles are too short for effective brushing.

When an abrasive or cloth brush is worn, the brushing material will become smooth or the brush will be considerably smaller in diameter as compared to new. Cloth brush heads may only need cleaning to rejuvenate the cloth. Please call SuperMax Tools if you have any questions. Brush life can vary considerably, due to RPM, contact, type of brush, and material being brushed.

Many types of brush heads may be rewound with new bristles or re-equipped with new brush material. Please contact SuperMax Tools if you have questions about a new or re-wrapped brush head.

Some types of brush heads, some fladder brushes, for example, will allow changing of the brush material by the operator, thus eliminating the need to send the brush head out for re-wrapping. Please call SuperMax Tools if you have any questions about re-wrapping a brush.

When using a wire brush for “distressing” wood, slowing brush RPM, using light contact and a moderate feed rate generally will give the best finish and longest brush life.

When using a wire brush on metal, it is important to use a light contact of the bristle tips.

Wire brushes frequently flipped end for end, to keep the wire from bending in one direction, will extend brush life. **Caution**, if you choose not to flip the brush frequently, it is better not to flip the brush at all.

Nylon Brushes. “Dress” tips of bristle brush periodically to maintain uniform brush wear and to expose new grit on the ends of the fiber.

Dressing Instructions:

Staple a wide sheet of 60 grit sandpaper to a 1/2” thick flat wood surface. Strips of narrow sandpaper can also be used. Raise the brush so the tips of the bristles contact the sandpaper by 1/32”. Set the conveyor speed to approximately 50% feed rate. Pass the abrasive loaded board through the machine until the brush fibers are sharp and even.

DEPTH GAUGE OPERATION

The depth gauge (see Fig. 11) measures the distance between the conveyor table and the bottom of the sanding brush. The sanding brush must be parallel to the conveyor bed surface. To calibrate the depth gauge, loosen the locking knob of the lower depth gauge casting so it rests on top of the table support casting. Raise the conveyor table until it touches the sanding brush. Then loosen the locking knob of the upper depth gauge casting and position the “0” mark of the scale even with the top of the lower depth gauge casting. Lock the upper depth gauge casting in position.

Once calibrated, the locking knob of the lower depth gauge casting can be loosened, allowing the lower depth gauge casting to ride on top of the table support casting. The depth can then be read where the scale enters the lower depth gauge casting. The depth gauge can also be used as a stop gauge as follows: Position the lower depth gauge casting along the scale to a desired finish thickness. Then lock the lower depth gauge casting with the locking knob to prevent the conveyor table from being raised above that point

MONTHLY MAINTENANCE

For best results, perform the following recommended maintenance procedures on a monthly basis:

- Lubricate conveyor bushings and check for wear.
- Lubricate all moving parts, such as threaded rods, washers, and column tubes.
- Clean dust from the conveyor belt.
- Blow dust from the motors.
- Check all set screws for tightness on parts such as brush support castings, bearings, conveyor coupler, castings, pulleys, and miter gears.
- Clean brush, if applicable.

TIPS FOR MAXIMUM PERFORMANCE

The versatility designed into the SUPERBRUSH allows it to be used for a wide-ranging variety of tasks that will boost the return on your investment. Learning to use its multiple adjustments and controls will allow you to fine-tune the machine for maximum results, regardless of the job to be done. The best results come from experimenting with different machine adjustments to fit the job at hand. Following is a listing of useful tips which can help you improve performance of your brush sander.

Dust Collection. When connecting dust collectors, remember that straight pipe will not restrict airflow as much as flexible tubing. Also, Ys and elbows will restrict airflow less than Ts. When connecting to the dual ports of the SUPERBRUSH 36, use a larger diameter pipe to the machine, and then split to two 4" hoses connected to the ports. An alternative is to use two separate 4" lines running to the ports; **do not** use only one 4" line and split it by the machine.



Fig. 12. Offset stock feeding angle.

Brushing Multiple Pieces At Once. When brushing multiple pieces simultaneously, make sure to stagger (step) the pieces across the width of the conveyor belt. This provides better contact with the tension rollers. Try to only process multiple pieces of similar thickness. If there is a significant thickness difference, the thinner pieces can slip on the conveyor belt if they do not contact the tension rollers. When brushing high stock, special care is needed to prevent tipping.

Brushing Imperfect Stock. To avoid personal injury, take special care when brushing stock that is twisted, bowed, or otherwise varies in thickness from end to end. If possible, support such stock as it is being brushed to keep it from slipping or tipping. Use extra roller stands, help from another person, or hand pressure on the stock, to minimize potentially hazardous situations.

Stock Feeding Angle. Some pieces, because of their dimensions, will need to be fed into the machine at a 90° angle (perpendicular to the brush). However, even a slight offset angle of the stock can provide for more effective brushing on some stock (Fig. 12).

Keeping the Machine Clean. For best results, make cleaning the machine a regular shop procedure. Allowing excess build-up of dust and debris can adversely affect performance, slippage on the conveyor belt, and/or the accumulation of material on the brush which can throw off the center of balance. Leave the dust collector on when cleaning dust from the brush. Also brush the conveyor belt after cleaning operations. If not cleaned, the conveyor belt could allow stock to slip during brushing operations.

TROUBLESHOOTING YOUR SUPERBRUSH

Any operating problems with the SUPERBRUSH will likely occur most often during the period that you are becoming familiar with its components and their adjustments. If you are experiencing a problem affecting the machine's brushing

performance, check the following listings for potential causes and solutions; it may also pay to review the previous sections in this manual on setting up and operating your machine.

TROUBLESHOOTING GUIDE: MOTORS

Problem	Possible Cause	Solution
Motors do not start.	1. Main power cord unplugged from receptacle.	Plug in primary power cord.
	2. Brush motor cord unplugged from receptacle near power-feed motor.	Plug in brush motor cord at receptacle on machine if so equipped (Fig. 4).
	3. Circuit fuse blown or circuit breaker tripped.	Replace fuse or retrip breaker (after determining cause).
	4. Brush motor thermal overload protector tripped (Single phase motor only).	Reset after allowing to cool; check circuit and/or reduce load or slow feed rate (Fig. 4)
	5. Conveyor motor fuse blown.	Replace 3/4 amp fuse (page 24).
Brush motor overloads.	1. Inadequate circuit.	Check electrical requirements (page 6).
	2. Machine overloaded.	Use slower feed rate; slower brush RPM; reduce depth of cut.
Conveyor motor oscillates.	1. Motor not properly aligned.	Loosen housing bolts, run motor, retighten bolts.
	2. Shaft collar or bushing worn.	Replace shaft collar or bushing (page 5).
	3. Drive roller bent.	Replace drive roller (page 20).
Brush motor or conveyor gear motor stalls.	1. Excessive depth of cut.	Reduce depth of cut; decrease brush speed; reduce feed rate.

TROUBLESHOOTING GUIDE: CONVEYOR		
Problem	Possible Cause	Solution
Conveyor rollers run intermittently.	1. Shaft coupling loose.	Align shaft flats of gear motor and drive roller; (page 5) tighten shaft coupling set screws.
Conveyor belt slips on drive roller.	1. Improper conveyor belt tension.	Adjust belt tension (page 8).
	2. Excessive depth of cut.	Reduce depth of cut; reduce feed rate.
Stock slips on conveyor belt.	1. Excessive depth of cut.	Reduce depth of cut.
	2. Tension rollers too high.	Lower tension rollers (page 9).
	3. Excessive feed rate.	Reduce feed rate.
	4. Dirty or worn conveyor belt.	Clean or replace conveyor belt.
Conveyor belt tracks to one side, or oscillates from side to side.	1. Belt out of adjustment.	Readjust belt; (page 8).
	2. Drive or driven conveyor belt rollers misaligned.	Readjust (page 20).
	3. Conveyor table not flat and square.	Readjust by leveling machine (page 7).
	4. Conveyor belt worn.	Replace conveyor belt (page 20).
	5. Drive roller worn or damaged.	Replace drive roller. (page 20).
	6. Roller bushings elongated due to excessive wear.	Replace bushings. (page 20).

TROUBLESHOOTING GUIDE: MACHINE		
Problem	Possible Cause	Solution
Brush height adjustment works improperly.	1. Improper adjustment of height control.	Readjust height control (pages 7 and 16).
Knocking sound while running.	1. Bearing out of alignment.	Rotate bearing (page 22)
	2. V-belt worn.	Replace V-belt (page 21).
	3. Pulleys wobbling or out of round.	Tighten set screws or replace pulley (page 22).
	4. Set screws loose in pulley or bearing.	Retighten set screws.
	5. Bearing worn.	Replace bearing (page 22).
Sniping of wood (gouging near end of board).	1. Inadequate support of stock.	Use roller stands to support stock.
	2. Conveyor drive or driven rollers higher than conveyor bed.	Readjust rollers (page 20).
Burning of wood. or melting of finish	1. Feed rate too slow.	Increase feed rate.
	2. Excessive depth of cut	Reduce depth of cut, decrease brush RPM.
Gouging of wood.	1. Conveyor belt is too loose.	Adjust belt tension.
	2. Excessive depth of cut.	Reduce depth of cut, decrease brush RPM.
	3. Wood slipping on conveyor due to lack of contact.	Use alternate feeding procedure (page 12).

SERVICING YOUR SUPERBRUSH

The basic adjustment procedures for your machine are covered under Setting Up Your SUPERBRUSH, page 6. Review that section first. If following the general instructions does not solve a specific problem or result in smooth operation, also check Troubleshooting Your SUPERBRUSH, page 13. Below are suggested procedures to follow when more thorough readjustment or replacement is necessary.

ADJUSTING HEIGHT CONTROLS

Height adjustment problems may be the result of not loosening the set screws in the table support castings before attempting operation. (This is covered on page 5 of this manual, and also on the separate unpacking sheet which was shipped with your machine.) If the set screws were not loosened as instructed, do so now before proceeding further. Also make sure all moving parts of the height adjusting mechanism are well lubricated, including the miter gears, column tubes, and threaded height adjusting screws.

When troubleshooting the height adjustment mechanism, first check the conveyor table for level (see page 7). Then test the height adjustment mechanism (See Fig. 13). If it does not operate

easily, further adjustments may be necessary, as outlined below. Following these steps should result in smooth operation.

Readjustment Procedure

1. Loosen the set screws located at the front of the table support castings (Fig. 3).
2. Lubricate thoroughly by applying penetrating lubricant to the table support castings where they contact the column tubes, and to all contact points of adjusting screws and transfer rod (Fig. 15). Also apply grease or oil to the miter gears.
3. If the height adjustment feels stiff, check for misalignment of adjusting screw supports and the brush support castings which could cause binding on the adjusting screw (Fig. 5). These castings can be adjusted by loosening the set screws which secure them to the column tubes. Realign the adjusting screw supports by loosening the two set screws that hold them to the column tubes and rotate to the proper position.
4. The adjusting screw supports located immediately below the height adjustment handle and the left

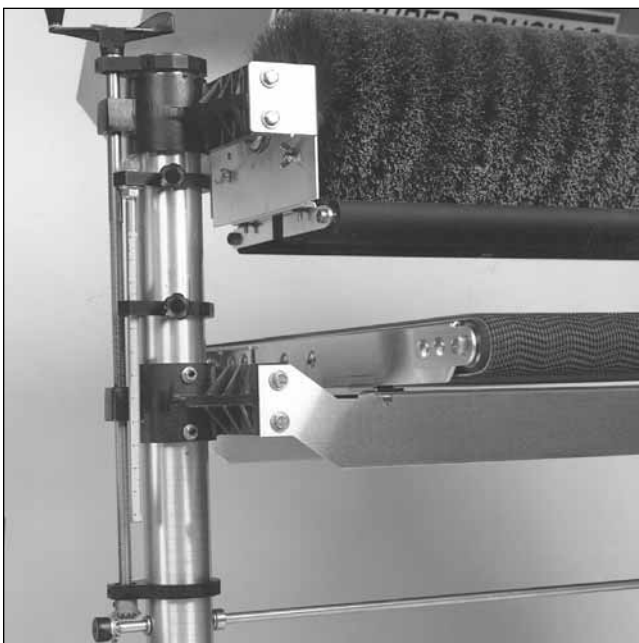


Fig. 13. Table support casting set screws.



Fig. 14. Adjusting miter gears for proper mesh.

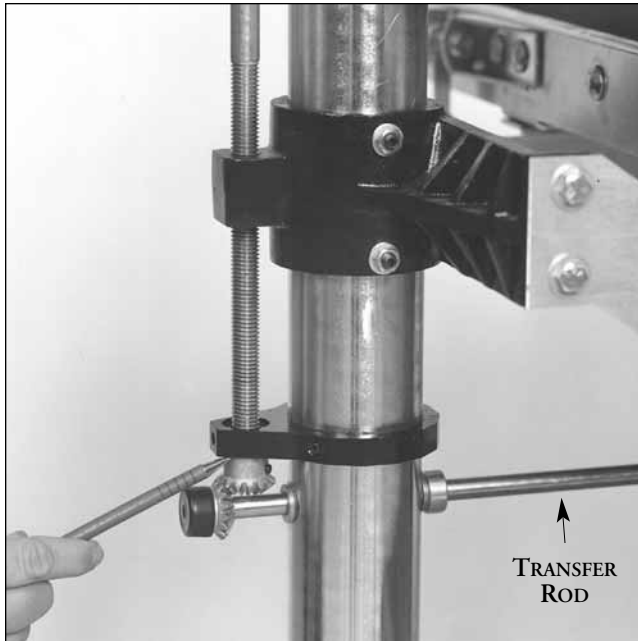


Fig. 15. Miter gear below adjusting screw support.

(outboard) brush support casting (Fig. 15) must both be set at the proper height along the column tubes so the height adjusting screws provide for proper miter gear alignment. Before adjusting these parts, tighten one set screw in the table support castings (Fig. 5) to hold the height adjusting screw in position during adjustment.

Also check to see that the column tubes are centered inside the bore of the table support castings (Fig. 5). If not, loosen the casting bolts and tighten the set screws at the front of table support casting to center the tube. Retighten the bolts and loosen the set screws.

5. If the height adjustment mechanism feels rough, check the miter gear (Fig. 14) alignment. The miter gears can be adjusted on their shafts by loosening the set screws on the gears. Check and adjust so that the gear mesh is not too tight or too loose, and that the gear teeth align with the opposing gear. Note that the shaft collars located on the transfer rod should be adjusted to control the lateral movement of the transfer rod to maintain accurate miter gear alignment and mesh.

The mesh of the miter gears should be smooth and even. If not, adjust the gears for good mesh. Measure the space between the miter gear and the adjusting screw support that holds the height adjusting screw in place (Fig. 15). The distance



Fig. 16. Height controls on outboard side.

should be 1/64" or less. If there is excessive space, move the adjusting screw support to the proper distance above the miter gear and retighten. Loosen the set screws in the table support castings (Fig. 3) and test for smooth operation.

6. Next, check the position of the height adjusting screw. First raise the conveyor table. Then check the retaining-clip and washer at the top of the height adjusting screw on the right (inboard) side, and under the height adjustment handle on the left (outboard) side of the machine (Fig. 5). On both sides, the washer and handle should be snug on the casting and retaining the washer. If there is a space between the washer and the casting, tighten one set screw in each of the table support castings. If one height adjusting screw is loose, remove the miter gear from the transfer rod on that side. Turn down the threaded height adjusting screw rod until it is snug on the washer. Make sure both sides are snug on top. Reinstall the miter gear and tighten. Loosen the set screws in the table support castings and test for smooth operation.

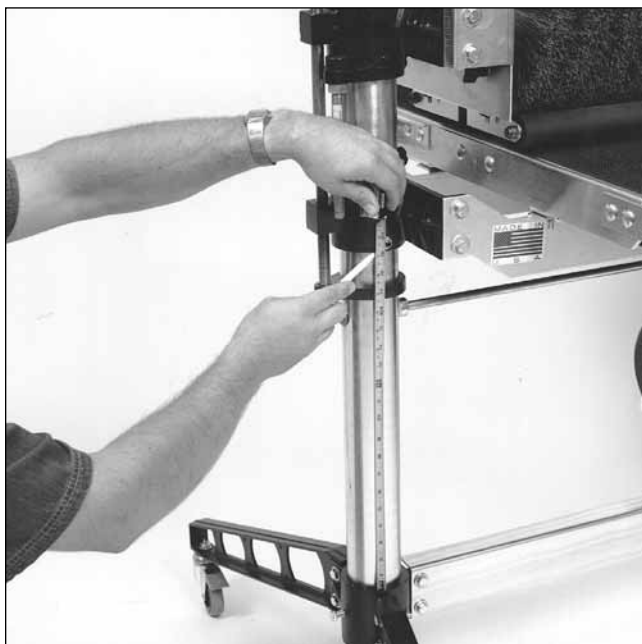


Fig. 17. Adjusting table support castings.

LEVELING TABLE

To measure levelness of table, measure the distance between the top of the base casting (Fig. 17) and the bottom of the table support castings. This measurement should be the same for both sides. If it is not the same, adjust as follows:

Remove the plastic cap from the miter gear (Fig. 14) on the outboard side of the machine. Loosen the set screw of the miter gear and slide it back to disengage it from the miter gear of the adjusting screw. Turn the adjusting screw handle to raise or lower the outboard side of the table so that the measurement taken above equals the inboard side of the table. After adjusting is complete, re-engage miter gear making sure that miter gear set screw is aligned with flat on cross bar shaft.



Fig. 18. Comparing brush support casting heights.

MITER GEAR ALIGNMENT

If height adjustment mechanism does not operate easily, perform the following checks or adjustments:

1. Loosen set screws located on table support castings. (Fig. 3).
2. Lubricate thoroughly! Apply penetrating lubricant to table support castings where it contacts the column tubes, and to all contact points of adjusting screws and cross bar. Apply grease/oil to miter gears.
3. Check miter gear alignment. Check and adjust gears so that gear mesh is not too tight nor too loose and that gear teeth align with opposing gear. The miter gears can be adjusted on their shafts by loosening the set screws on the gears. Note that set screws **MUST** align with flat of shaft. To raise or lower the vertical miter gears, the adjusting screw support, located immediately above the gears, must also be raised or lowered to ride on top of the gear to maintain adjusting screw position.
If vertical miter gear is raised to its highest position, then the adjusting screw (Fig. 5) must be raised, if necessary, to obtain proper gear alignment. Raise adjusting screws as follows:

Inboard follow screw (right): Loosen and raise adjusting screw support (Fig. 5). Loosen both set screws located on front of brush support casting and raise inboard side of brush, screw and table to desired height. Retighten set screws of brush support casting (Fig. 3) and re-position and tighten adjusting screw support at top of miter gear. The brush and conveyor table must be re-aligned after this adjustment. See Leveling Table and Brush Alignment (page 7).

Outboard Adjusting Screw (left): Loosen and raise adjusting screw support (Fig. 5) above miter gear. Tighten set screw at front of outboard table support casting. Loosen set screw and disengage opposing horizontal miter gear. Turn adjusting screw handle to raise screw to desired height. Re-position adjusting screw support to bottom of handle. Re-position adjusting screw support (Fig. 17) to top of miter gear. Loosen set screws of table support casting (Fig. 3). Re-engage opposing horizontal miter gear. NOTE: Shaft collars (Fig. 10) located on the transfer rod should be adjusted to control lateral movement of the transfer rod to maintain accurate miter alignment and mesh.

4. Check and adjust for misalignment of adjusting screw supports (Fig. 5) and brush support castings which could cause binding on the adjusting screw. These castings can be slightly rotated by loosening the set screws which secure it to the inside of the column tubes. NOTE: The adjusting screw support (Fig. 5) located immediately below the height adjusting handle and the outboard brush support casting, must be set at the proper height along the column tubes to position the adjusting screws so that there is proper miter gear alignment. Before adjusting these parts, tighten one set screw of table support castings to maintain adjusting screw position during adjustment.

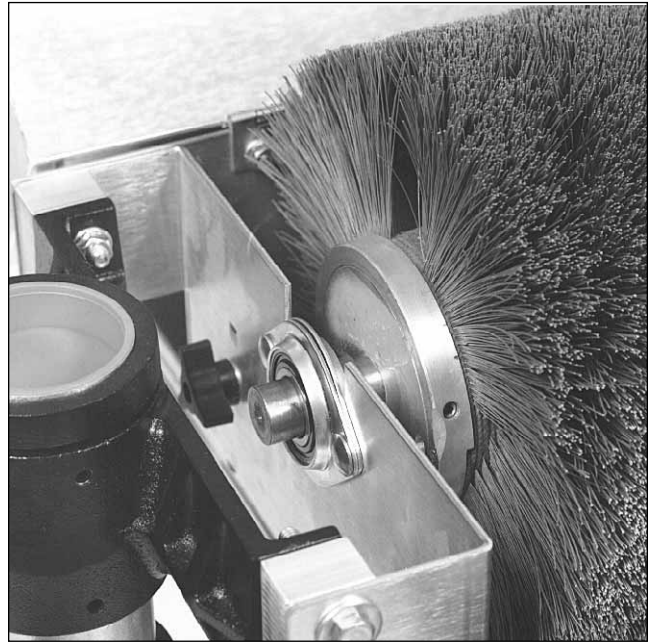


Fig. 19. Removing brush head.

BRUSH SPEED ADJUSTMENT

If the brush speed adjustment does not operate easily, perform the following check or adjustments:

1. Loosen set screws located on front of motor support casting (Fig. 3).
2. Lubricate thoroughly!! Apply penetrating lubricant to motor support casting where it contacts the column tubes and to all contact points between adjusting screw and adjusting screw supports (Fig. 5).
3. Improper alignment of adjusting screw supports may cause binding on the adjusting screw. Loosen both set screws on each adjusting screw support to rotate or adjust screw supports. Note that adjusting screw supports control both lateral and vertical movement of the adjusting screw mechanism and must be adjusted accordingly.

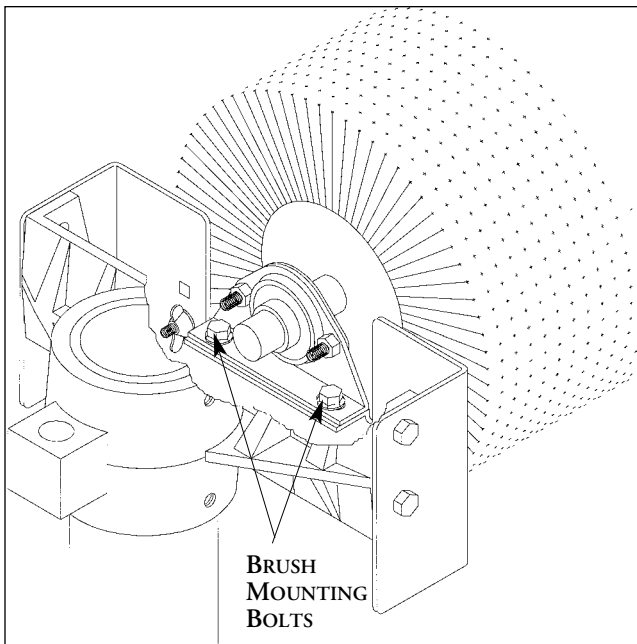


Fig. 19A. Removing brush head (some models).

CHANGING OR REPLACING BRUSH

Changing the brush on the SUPERBRUSH is relatively simple. To begin, first disconnect power source to the machine. Lower the motor to its lowest position using the brush speed control handle. Raise the motor to its highest position. This loosens the V-belt tension so the V-belt can be lifted off the driven pulley, pulled back and placed under the control handle to hold it out of the way. Loosen and remove bearing bolts (Fig. 19 and 19A, depending on model. See also page 23 and Fig. 25.) Lift brush out of machine. Loosen set screws of bearing collars and pulley. Remove bearings and pulley and install on replacement brush.

Install replacement brush in machine and center brush before tightening bearing bolts. Tighten bearing set screws after bearing bolts are tightened. Install V-belt on driven pulley and adjust pulley for proper V-belt alignment before tightening pulley set screw.

REPLACING CONVEYOR BELTS

To replace the conveyor belt, the conveyor assembly must be removed from the machine. Lower the conveyor table to its lowest position with the height adjustment handle. Turn off power source to machine. Place conveyor motor assembly on top of dust cover (see #3, page 5). Loosen the conveyor take-up screws (Fig. 21) to relieve belt tension and slide the driven roller fully inward. Remove the four bolts that attach the conveyor assembly to the table mount brackets (see Fig. 21). Lift the conveyor and remove it from the machine by sliding the conveyor out toward the front of the machine. Avoid tearing the belt on any edges underneath the conveyor bed during removal. Reverse the procedure for re-installation.

Note: If the conveyor belt continually tracks to one side of the machine, first try reversing the belt on the conveyor bed. If this doesn't remedy the problem, place a level on the conveyor bed to make sure the conveyor bed is not twisted. If it is twisted, see page 7 for instructions on squaring up the bed. If squaring up the bed does not remedy the problem, proceed with the steps below:

Step 1. Check the conveyor drive and driven roller to make sure it is parallel to the surface of the conveyor bed. To do this, first center the conveyor belt on the bed. Then lay a straight-edge on the exposed edge of the conveyor table on the left (outboard) side, extending it over the drive or driven roller. Note the distance between the drive or driven roller and the straight-edge.

Step 2. Now repeat Step 1 on the right (inboard) side of the conveyor. Compare the measurements from side to side. If they are not equal, loosen one of the brackets that hold the drive or driven roller in place. Tip this bracket until the distance between the drive roller and the straight-edge are equal from side to side, then tighten the bracket.

Conveyor Belt Tension: To adjust the tension of the conveyor belt, first adjust the take-up screw nut (Fig. 21) on both sides of the conveyor to obtain approximately equal tension on both sides of the belt when taut. Insufficient belt tension will cause slippage of conveyor belt on the drive roller during sanding operation. The conveyor belt is too loose if it can be stopped by hand pressure applied directly to the top of the conveyor belt. Excessive belt tension can result in bent rollers, premature wearing of the bronze bushings or conveyor belt

Conveyor Belt Tracking: Belt tracking adjustments are made while the conveyor belt is running. After the proper belt tension is obtained (see above), turn the conveyor unit on and set it at the fastest speed setting. Watch for a tendency of the conveyor belt to drift to one side of the conveyor. To adjust the belt tracking, tighten the take-up screw nut (Fig. 21) on the side the belt is drifting toward, and loosen the take-up screw nut on the opposite side. Adjusting the take-up screw nuts on either side of the conveyor allows belt tracking adjustments to be made without affecting belt tension. **Note:** Adjust the take-up screw nuts only 1/4 turn at a time. Then allow time for the belt to react to the adjustments before proceeding further. Try to avoid over-adjustments.

REPLACING V-BELT

To change the V-belt on the SUPERBRUSH, first disconnect power source to machine.

1. Lower the main motor to its lowest position using the brush speed control handle. Raise the motor to its highest position. This will loosen the V-belt in the drive pulley so the V-belt can be lifted off the driven pulley.

2. Remove the miter gear from the right (inboard) side of the transfer rod (Fig. 14). (If E clips are attached to the rod, remove both at this time.) Now loosen the shaft collar on the left (outboard) side of the rod, and pull the rod back enough so the V-belt can be removed. (Make sure to catch the nylon washer which will drop off the transfer rod.)

3. Remove the inner half of the pulley guard by removing the six screws holding the inner half to

the outer half. Remove the inner half of the pulley guard.

4. Remove the top two bolts holding the top of the outer pulley guard. The outer half of the pulley guard can be removed by pulling it up and out through the head assembly.

5. Remove V-belt from drive pulley. If there is not enough clearance to remove V-belt loosen the four bolts securing the main motor to bracket. Note location of motor before sliding motor out of the way for ease of reassembly. Note the routing of the old V-belt: now remove the old V-belt and replace it with the new V-belt (Fig. 23 and 24).

NOTE: If the V-belt will not fit between the drive pulley and the brush support casting, loosen or remove the bolts holding the bearings. Lift brush enough to allow V-belt to be removed. After installing new V-belt, retighten bolts.

Machine Reassembly

1. To reassemble the unit after replacing the V-belt, first reassemble the pulley guards.

2. Place the transfer rod back through the machine and reinstall the nylon washer. Tighten the shaft collar (install both of the E clips if so equipped). Reinstall the miter gear on the transfer rod, making sure the set screw is centered on the flat of the rod.

3. Adjust the tension on the V-belt by lowering the motor using the brush speed control handle.

4. Make sure that the V-belt is in alignment. Also check that all belts are tight before using the SUPERBRUSH.

ROTATING/REPLACING BRUSH BEARINGS

Replacing the permanently lubricated bearings on the SUPERBRUSH is a relatively straight-forward procedure. Bearings should be replaced when they allow excessive play of the brush, make excessive noise, or otherwise indicate failure.

Note that if clicking noises in the bearings are a problem, rotating may be a solution instead of replacement, as follows:

BEARING ROTATING

Step 1. Loosen the set screws in the bearing collar. Leave the set screw wrench in one of the set screws. Then rotate the brush within the bearing and tighten the set screws (Fig. 19 and 20).

Step 2. If the clicking persists, or if the brush shaft is tight in the bearing and cannot rotate, then loosen the two bolts holding the bearing and the flange for the bearing. Now repeat Step 1. After the brush is rotated within the bearing, tighten the flanges first and then the set screws. After the machine has run for a half hour, stop to check that the set screws and bearing bolts are tight.

Bearing Replacement:

1. Disconnect power source to the machine.
2. Lower motor to its lowest position using the RPM adjustment handle. Then raise motor to its highest position using the RPM adjustment handle. This loosens the V-belt tension so the V-belt can be lifted off the driven pulley.
3. Raise conveyor bed until the brush rests on bed.

If replacing both bearings, begin with bearing on the left (outboard) side.

Replacing Left (Outboard) Bearing:

Make sure power is disconnected to the machine.

1. Remove the outer half of the bearing flange. Loosen the set screws in the bearing collars and remove the bearing.
2. If the shaft of the brush is rough from the set screws, use emery cloth or sandpaper to smooth down any raised edges. Slide the new bearing on the shaft, but do not tighten the set screws yet.
3. Install the outer half of the original bearing flange and tighten the bolts. Then tighten the set screw in the bearing collar.

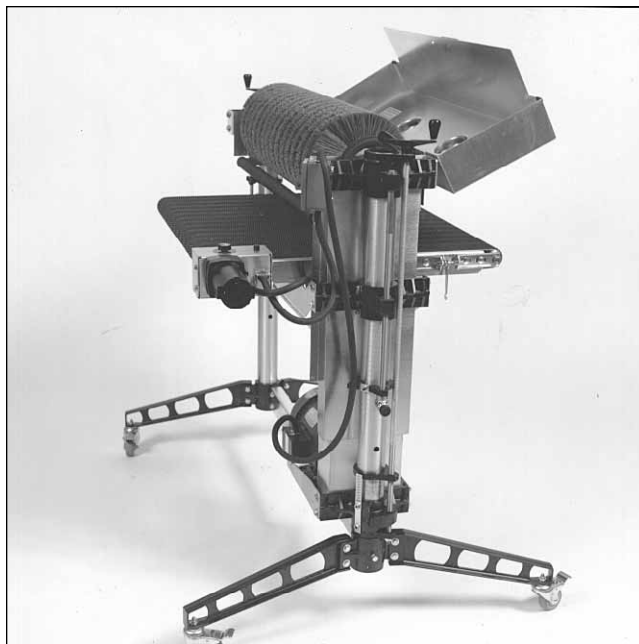


Fig. 20. Conveyor belt replacement.

If the left (outboard) bearing is the only one that needs changing, proceed to reassemble the unit. You can check the brush at this point by lowering the conveyor bed and spinning the brush by hand. This will help determine if the inboard bearing needs to be changed to eliminate noise or excessive play in the brush.

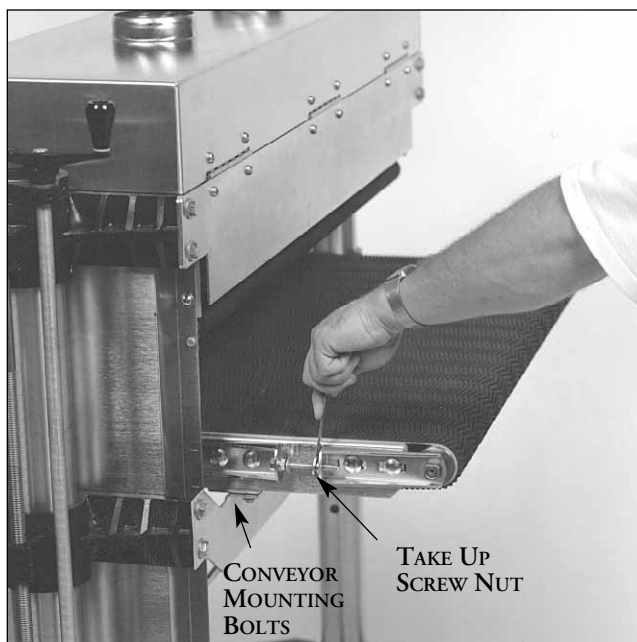


Fig. 21. Tensioning and tracking conveyor belt.

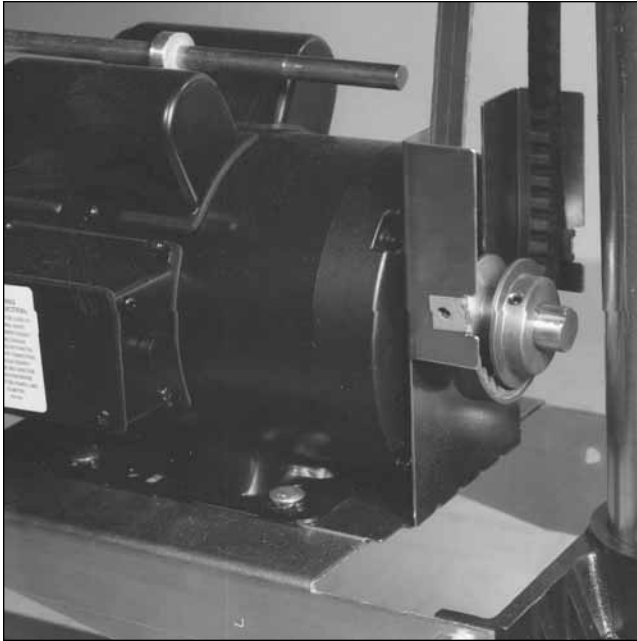


Fig. 23. Removing lower guard and transfer rod.

Replacing Right (Inboard) Bearing:

Disconnect power source to brush.

1. Lower motor to its lowest position using the RPM adjustment handle. Then raise motor to its highest position using the RPM adjustment handle. This loosens the V-belt tension so the V-belt can be lifted off the driven pulley.
2. Raise conveyor table so brush rests on conveyor.
3. Remove left (outboard) bearing by removing the two carriage bolts from bearing.
4. Remove the right (inboard) bearing by removing the two carriage bolts from bearing.
5. Remove V-belt from driven pulley.
6. Lift brush head out from machine.
7. Loosen set screws in bearing collar and driven pulley and remove from brush shaft.
8. Install new bearing and driven pulley. Do not tighten set screws at this time.
9. Install brush in machine and center before tightening bolts. Tighten bearing bolts and then set screws in bearings.
10. Install V-belt on driven pulley and adjust pulley for proper V-belt alignment before tightening pulley set screw.
11. Check the alignment of the brush to the conveyor system.

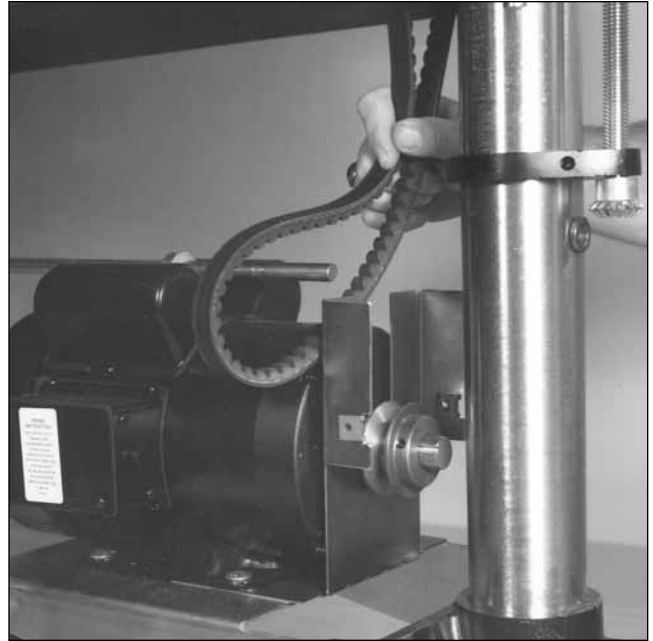


Fig. 24. Removing main motor V-belt drive.

REPLACING BRUSH HEAD

1. Lower motor to its lowest position using the RPM adjustment handle. Then raise motor to its highest position using the RPM adjustment handle. This loosens the V-belt tension so the V-belt can be lifted off the driven pulley.
2. Remove the bearing bolts (Fig. 19, 19A and 25) and lift brush out of machine. **Note:** Some models have two mounting bolts attaching the bearing housing down into the brush support bracket. These two bolts can be used to remove the brush head instead of the bolts through the bearing flange.
3. Loosen set screws in bearing collars and driven pulley and remove from brush shaft.
4. Install new bearings and driven pulley. Do not tighten set screws at this time.
5. Install brush in machine and center before tightening bearing bolts. Tighten bearing bolts and then set screws in bearings.
6. Install V-belt on driven pulley and adjust pulley for proper V-belt alignment before tightening pulley set screw.
7. Check the alignment of the brush to the conveyor system. (For instructions on this procedure, see page 7 of this manual).
8. Lower the conveyor and spin the brush by hand to make sure the brush shaft is not binding in the bearing. If the bearings bind, loosen the set screws

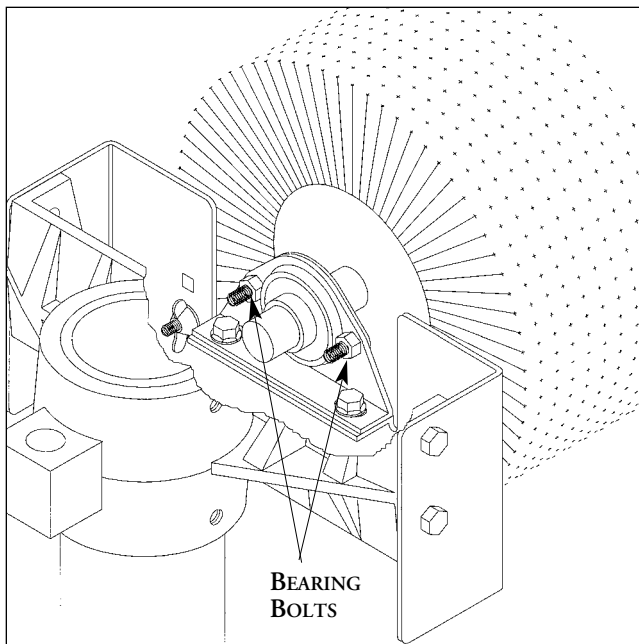


Fig. 25. Supporting brushes to remove bearings.

and the bearing flange for one bearing at a time. Spin the brush within the collar, then tighten the bolts in the bearing flange and then the set screws. 9. Test-run the SUPERBRUSH before brushing stock to check that all is operating properly and is aligned before brushing good stock. Also, stop the SUPERBRUSH after a couple hours of use and check the bolts and set screws to make sure they are seated properly.

REPLACING ELECTRICAL COMPONENTS

To replace either the variable-speed controller, or the conveyor motor, use the following disassembly procedure (Fig. 26 and pages 25 and 26):

Disconnect the power supply to the machine. Next, remove the bottom plate from the control box. Loosen the set screw in the shaft coupler, and then remove the four 5/16" bolts that hold the power feed motor assembly in place. Next, remove the assembly from the machine and turn it upside down to disconnect the leads from the components to be removed.

To replace the controller, remove the variable speed control knob. Remove the nut that holds the controller in place and pull the controller out of the housing. Install the new controller, referring to the correct electrical diagram and reverse the disassembly procedure.

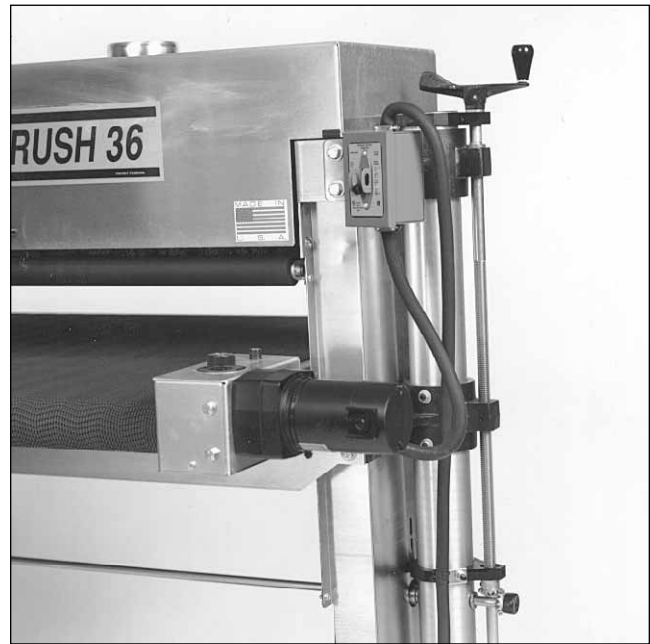



Fig. 26. Conveyor motor control box and brush on/off switch.

To replace on/off switch, make sure power is disconnected to sander. Remove the two screws holding the front cover of the switch in place. Disconnect and mark wire leads connected to switch mechanism. Remove switch from box and install new switch. Connect wires to new switch following the wiring diagram and marked wires. **IMPORTANT:** Make sure bare wire does not touch any other wire or the switch box when connected. Install switch assembly and cover.


To replace the conveyor gear motor, disconnect the two wire leads from the controller. Also disconnect the plastic grommet protecting the wires passing through the housing. Remove the four cap head set screws that hold the motor to the housing bracket. Remove the old motor and install new motor. Install the wiring leads according to the electrical diagram pertaining to the correct model (See following diagrams).

To replace conveyor fuse (Fig. 4), push and turn fuse cap 1/8 turn counter clockwise. Pull cap with fuse from base. Pull fuse from cap and replace with 3/4 amp fuse (pages 25 and 26). Place fuse and cap into base, push and turn 1/8 turn clockwise to secure.

5HP 1Ph

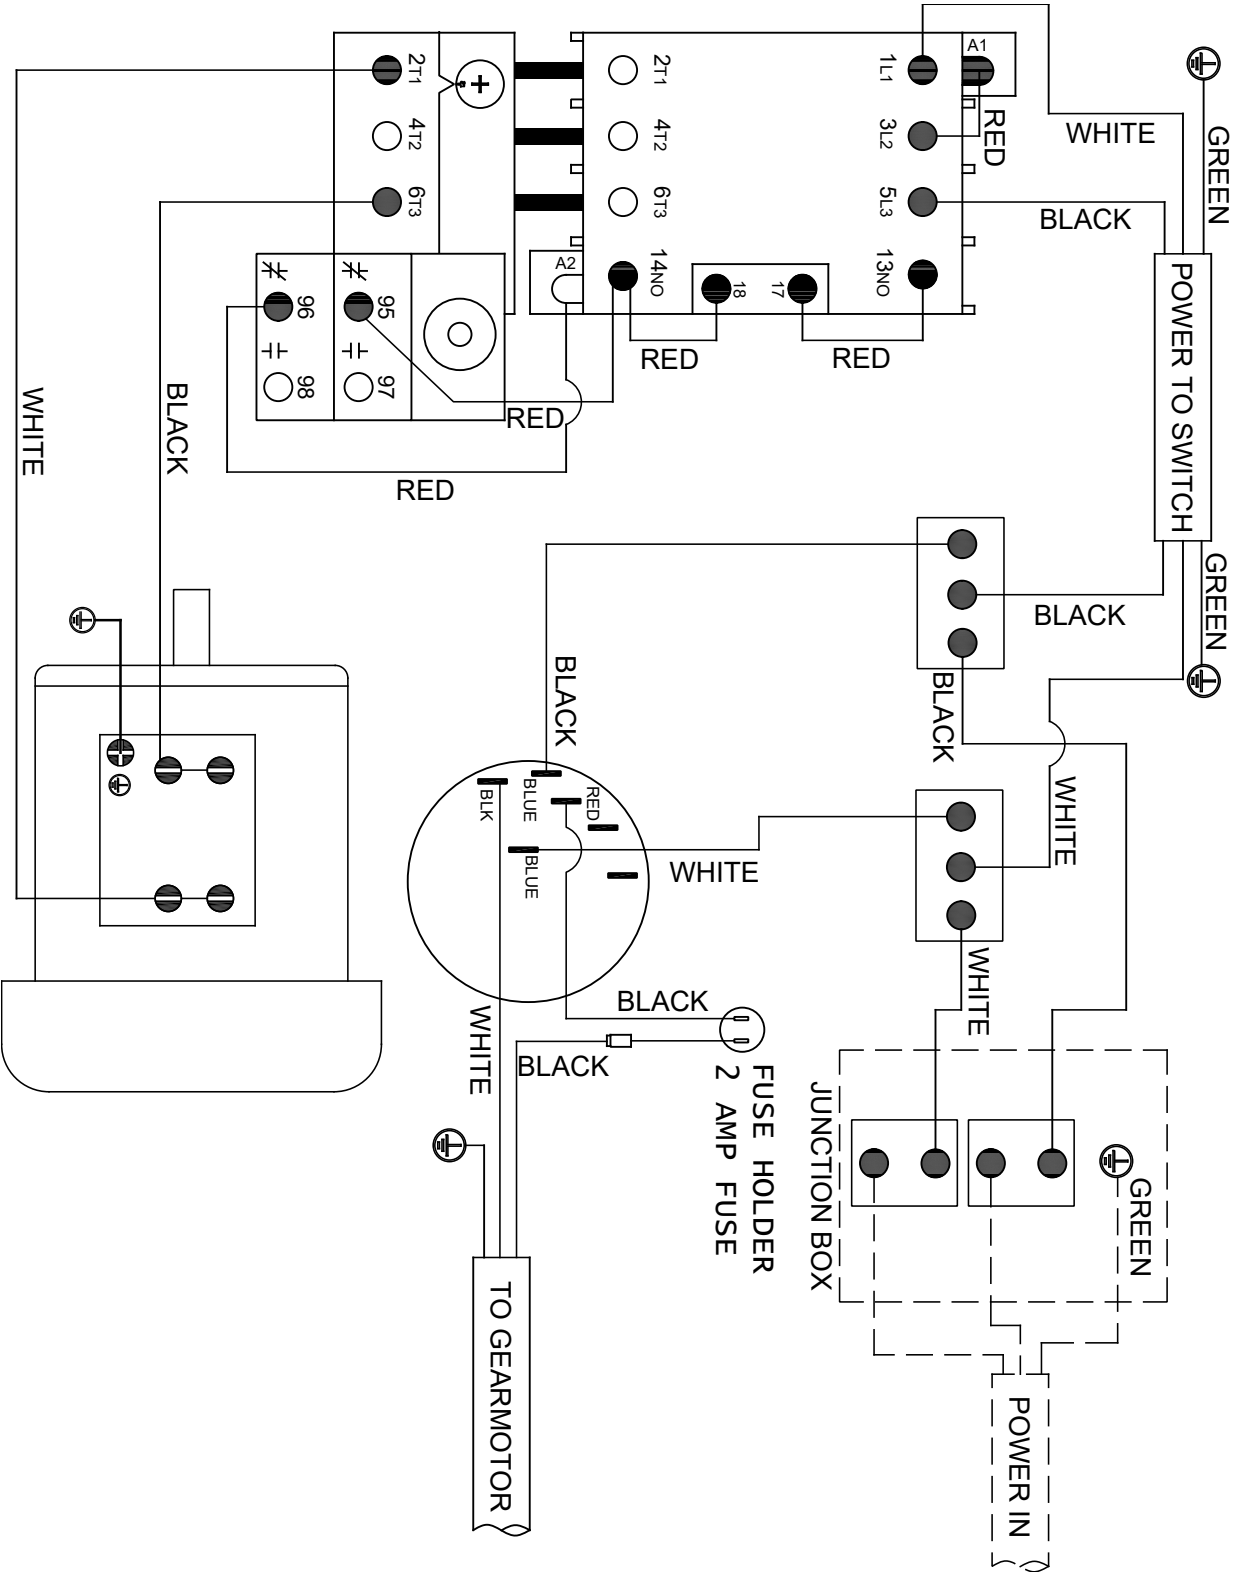

5HP 3Ph

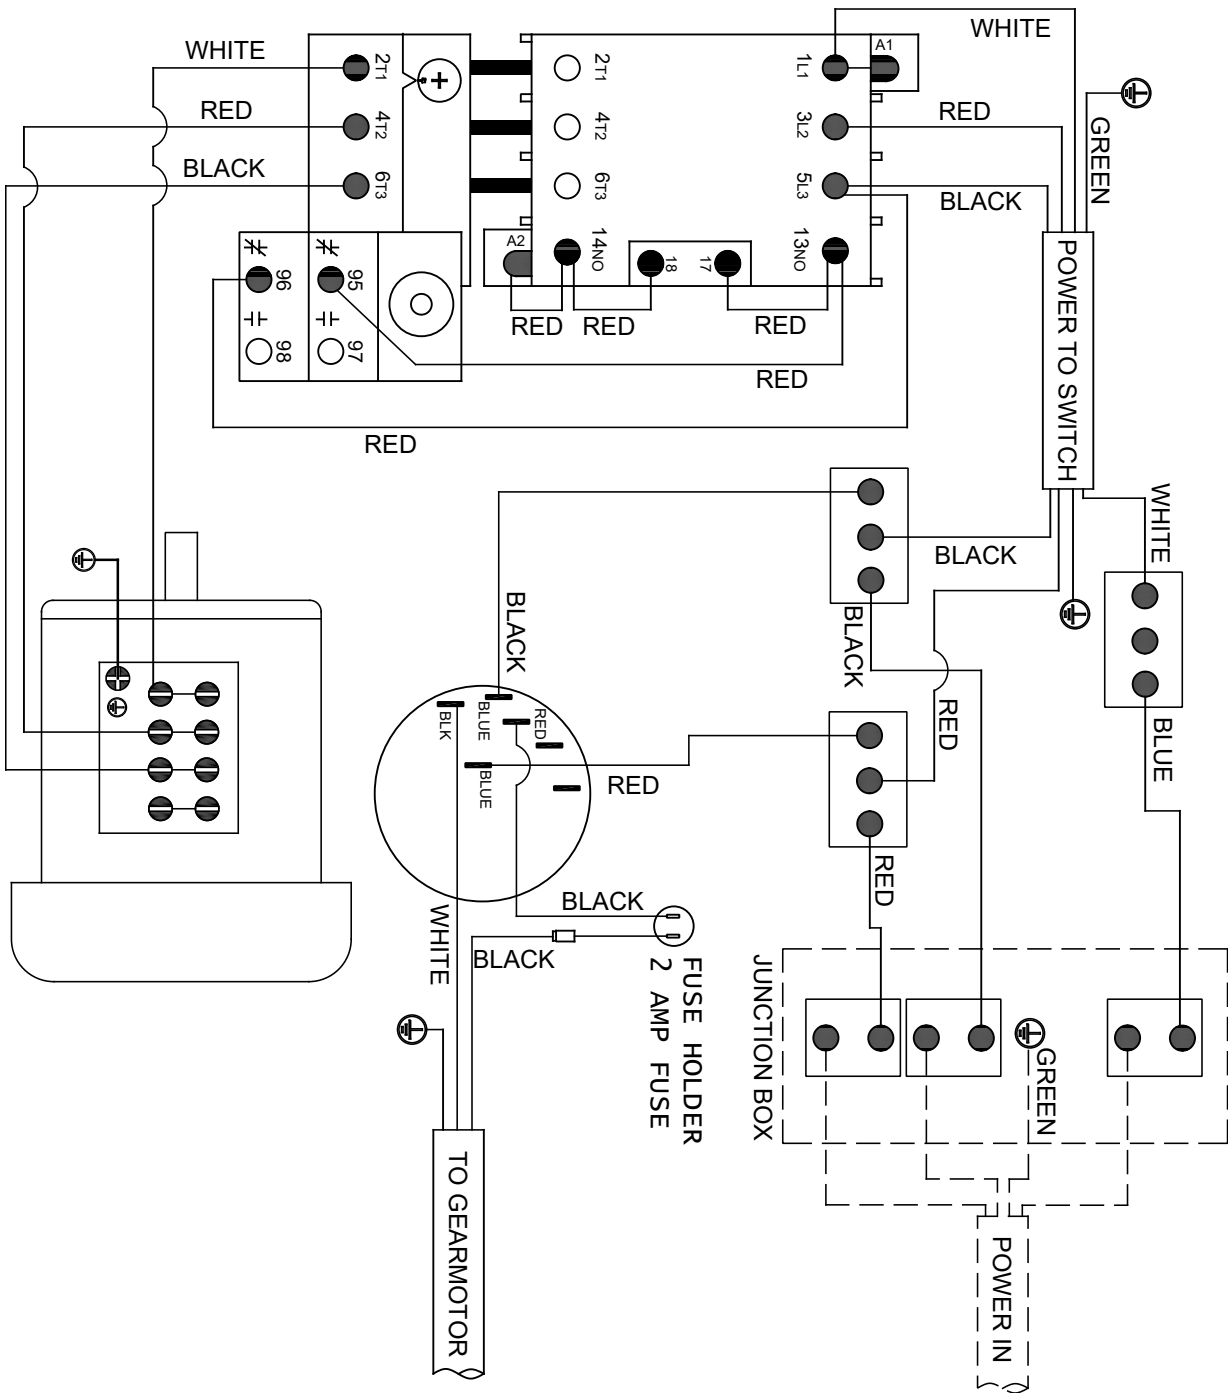

SUPERBRUSH SPECIFICATIONS

SUPERBRUSH 24

SUPERBRUSH 36

Warranty: Two years on parts and labor, limited;
Manufacturer's warranties on conveyor belts and brush heads.

Dimensions:	Model 24: Height: 52" Width: 46"; Depth: 42" Model 36: Height: 52" Width: 58"; Depth: 42"
Dust Hood:	Model 24: Steel hood with 4" vacuum port, hinged back Model 36: Steel hood with two 4" vacuum ports, hinged back
Brush Speed:	Infinitely Variable, 400-1200 RPM.
Brush:	See Brushes & Supplies, page 37
Bearings:	1" sealed, permanently lubricated, ball.
Conveyor Bed:	Steel reinforced with four steel cross sections.
Conveyor Motor:	100 in-lbs. torque, direct-drive DC motor (1/17 HP). Infinitely variable from 0 to 15 feet per minute.
Conveyor Belt:	Polyurethane, roughtop surface belt, with monofilament back, included. (Optional abrasive belt available.)
Stand Construction:	Zinc-plated steel, cast aluminum. Column tubes are centerless ground.
Drive Motor:	Both Models: 5HP, TEFC; 1,725 RPM; 60 HZ. Continuous Duty Single phase 208-230V; Optional three phase: 230V or (460V three phase)
Minimum Stock Length:	All Models 10" without fixtures.
Height Adjustment:	All Models: 3/32" per turn; Depth Gauge with locking stop included.
Stock Thickness Capacity:	11" maximum, typical* with nylon brushes. 12" maximum, typical* with wire brushes. *can vary depending on specific brush types
Approximate Shipping Weight:	Model 24: 375 lbs. Model 36: 475 lbs.
Tension Rollers:	1 1/2" diameter, rubber covered infeed and outfeed rollers mounted under spring tension, fully adjustable.
Dust Collection:	Mandatory for all models.


SUPERBRUSH: STAND ASSEMBLY PARTS LIST

Ref. Number	Description	Part Number			Qty../Unit
		SB24	Both Models	SB36	
1	HEIGHT ADJUSTMENT HANDLE		480BS-121		1
2	SET SCREW, 1/4"-20X1/4"		480BS-113		12
3	BEARING, R8ZZ		BB-R8ZZ		4
4	RETAINING RING, E12		20-0752		1
5	SUPPORT, ADJUSTING SCREW, W/BEARING		30-1112-0		4
6	SET SCREW, 1/4"-20X1/2"		10-2804		12
7	SCREW, INBOARD HEIGHT ADJ. FOLLOW		30-1211HR		1
8	PLASTIC CAP, 1"		80-4013		2
9	MITER GEAR		20-1101		4
10	ROUND OILITE BUSHING, 1/2" I.D.		50-3107		4
11A	RPM, BRACKET		40-0670		1
11B	RPM, DECAL (NOT SHOWN)		94-1674-1		1
12	SHAFT COLLAR, 1/2" I.D.		20-1103		2
13	TUBE, COLUMN		30-3044		2
14	SCREW, RPM, MOTOR		30-1209		1
15	MOUNT, MOTOR		30-5103		1
16	HEX NUT, 5/16"-18		12-0003		6
17	FLAT WASHER, 5/16"		11-0206		6
18	BRASS TIPPED SET SCREW, 5/16"-18X3/4"		10-9906		6
19	HEX CAP SCREW, 3/8"-16X1-3/4"		91267-242		9
20	FLAT WASHER, 3/8"		11-9103		24
21	BUTTON HEAD SOCKET SCREW, 3/8"-16X1-1/4"		913002-121		16
22	HEX NUT, 3/8"-16		12-0005		1
23	CASTER		98-0130		4
23.1	HEX NUT, 1/2"		98-0130-1		4
23.2	HEX NUT, 1/2"-13X34X3		98-0130-2		4
24	OUTBOARD HEIGHT ADJ. SCREW		30-1212HR		1
25	FLANGE LOCK NUT, 3/8"-16		12-0209		24
26	BASE, COLUMN		30-1101-1		2
27	BASE SUPPORT BRACKET	40-0230		40-4241	1
28	NYLON INSERT LOCK NUT, 5/8"-11		12-8015		1
29	SET SCREW, 1/2"-13X1/2"		10-8905		2
30	TRANSFER ROD	30-3033-02		30-3033-03	1
31	SUPPORT BRUSH		30-5206		2

SUPERBRUSH: STAND ASSEMBLY PARTS LIST

Ref. Number	Description	Part Number			Qty../Unit
		SB24	Both Models	SB36	
33	SUPPORT, OUTBOARD TABLE		30-5204		1
34A	DEPTH GAUGE ROD		30-1260HR		1
34B	DECAL, SCALE		94-1654		1
35	HEX NUT, 1/2"-13		925002-109		2
36	LEG		30-1105		4
37	KNOB, LOCKING W/SET SCREW		81-3132W		2
38	CAP, PLASTIC COLUMN TUBE, 3"		80-4015		2
39	SET SCREW, 5/16"-18X3/8"		10-2903		4
40	MOTOR MOUNT		40-0106		1
41	SUPPORT, INBOARD TABLE		30-5205		1
42	BRACKET, TABLE MOUNT	40-0025		40-0037	2
44	KNOB		80-3131W		1
45	NYLON WASHER		80-2324		2
46	FLAT WASHER, 5/8"X30X3t		91267-146		1
47	E-RING, E10		635DS-139		1
48	OILITE WASHER, 5/8" I.D.		50-3080		1
49	KNOB		913002-142		1
50	SUPPORT, ADJUSTING SCREW		30-1112		4
51	LOCK WASHER, 3/8"		480BS-111		30
52	HEIGHT ADJUSTMENT HANDWHEEL		31-0027		1

Exploded View: (24 SuperBrush)Stand Assmebly

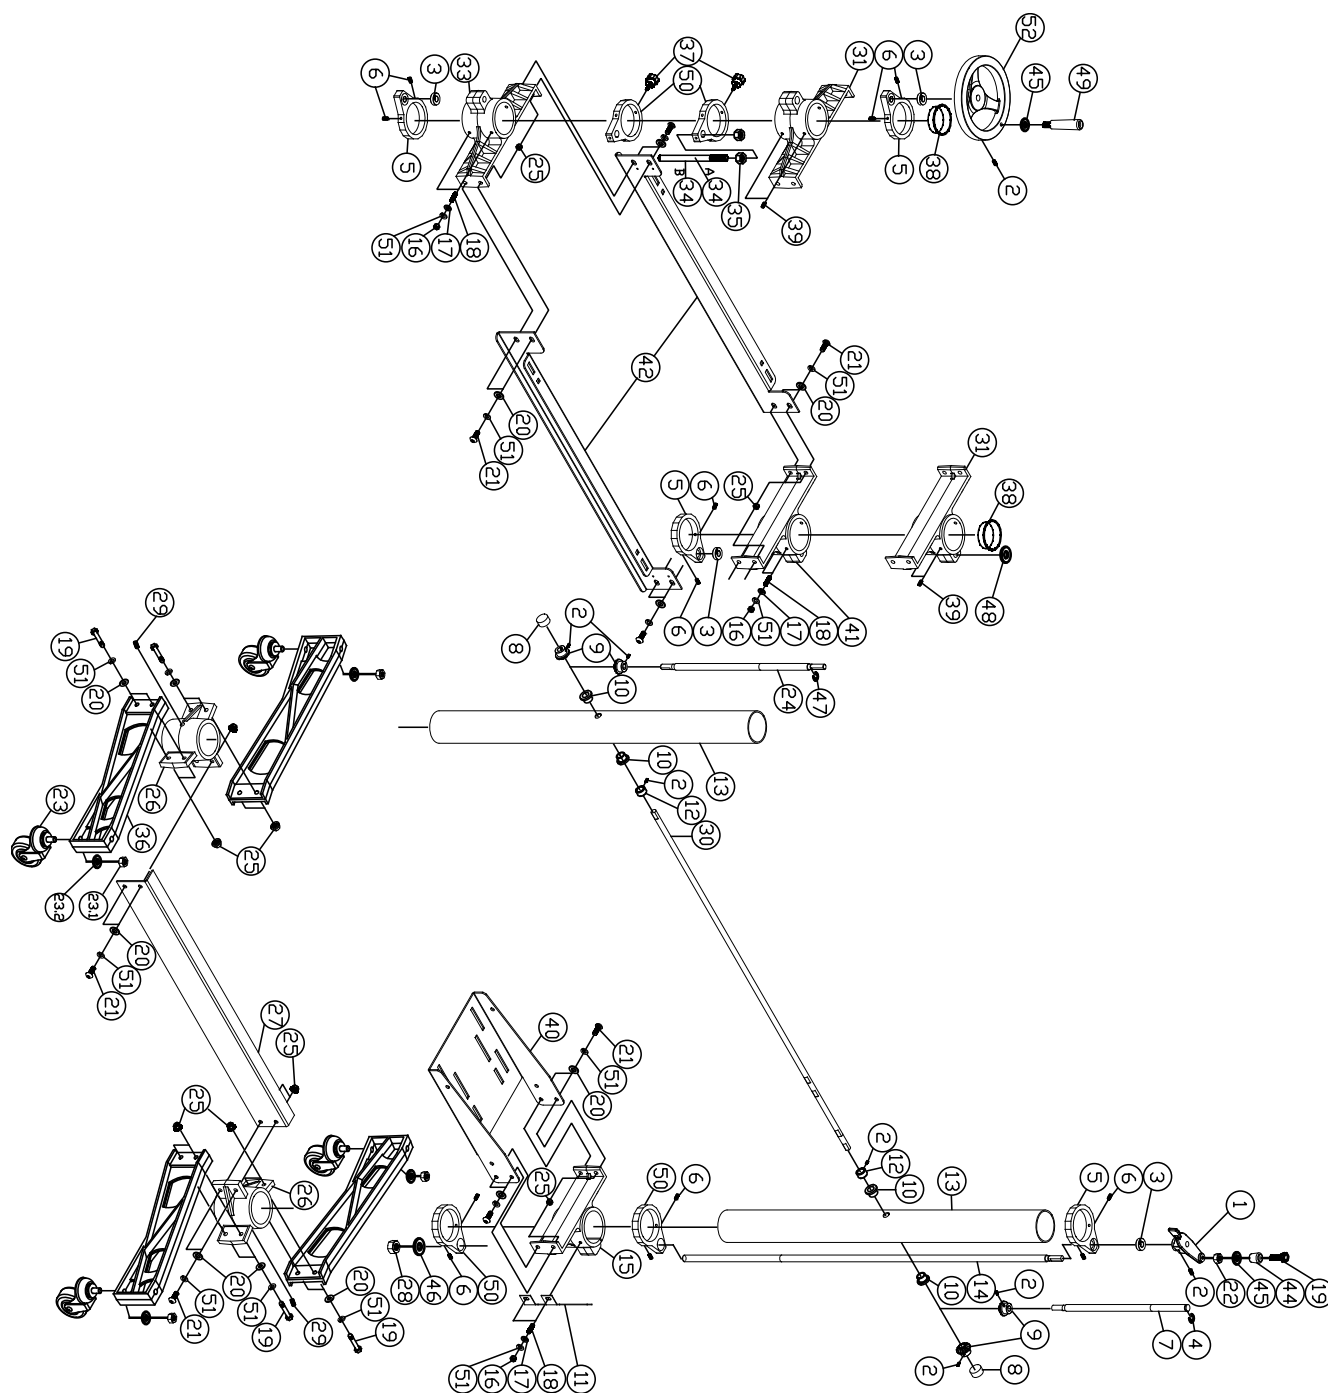


SUPERBRUSH DRUM HEAD ASSEMBLY PARTS LIST

Ref. Number	Description	Part Number			Qty./Unit
		SB24	Both Models	SB36	
1	DUST COVER	40-0655		40-3655	1
2	HANDLE, DUST COVER		80-2841		1
3	BUTTON HEAD SOCKET SCREW, 3/8"-16X1-1/4"		913002-121		8
4	FLAT WASHER, 3/8"		480BS-129		12
5	BRACKET, BEARING MOUNTING		40-0613		2
6	BEARING		50-3067		2
7	SET SCREW, 1/4"-28UNFX1/4"		480BS-142		4
8	CARRIAGE BOLT, 5/16"-18X3/4"		10-1203		8
9	PULLEY		50-0701-1		1
10	SET SCREW, 5/16"-18X3/8"		10-8903		2
11	FLANGE LOCK NUT, 3/8"-16		12-0209		8
12	BUTTON HEAD SOCKET SCREW, 5/16"-18X3/8"		91267-212		4
13	SCREW, 1/4"-20X1-3/4"		10-3213		4
14	BRACKET, LEFT SUSPENSION		40-0323		2
15	SPRING, TENSION ROLLER		20-3284		4
16	BRACKET, RIGHT SUSPENSION		40-0326		2
17	ROUND OILITE BUSHING, 1/2" I.D.		50-3107		4
18	BRACKET, SUSPENSION BASE		40-0322		2
19	LOCK WASHER, 3/8"		480BS-111		12
20	DUST PORT		635DS-210		2 / 3
21	ROLLER TENSION	30-1218		30-3218	2
22	FLANGE LOCK NUT, 5/16"-18		12-0207		6
23	HINGE		40-0225		3
24	BRACKET, DUST COVER MOUNTING	40-0605		40-3605	1
25	SCREW, 1/4"-20X1/2"		10-3205		12
26	LOCK-INT. TOOTH WASHER, 1/4"		11-0504		12
27	ROUND HEAD PHILLIPS SCREW, 5/16"-18X5/8"		913002-203		2
28	FLAT WASHER, 1/4"		11-0205		12
29	HEX NUT, 1/4"-20		12-0001		12
30	HEX NUT, 5/16"-18		12-0003		4
31	LOCK-INT. TOOTH WASHER, 5/16"		11-0505		3
32	BUMPER, DUST COVER		80-1065		2
33	GUARD, BELT COVER		40-0009		1
34	GUARD, BELT, PLATE		40-0010		1

SUPERBRUSH DRUM HEAD ASSEMBLY PARTS LIST

Ref. Number	Description	SB24	Part Number		Qty../Unit
			Both Models	SB36	
35	GUARD, RIGHT BELT COVER		91267-235		1
36	GUARD, LEFT BLET COVER		91267-236		1
37	HEX CAP SCREW, 3/8"-16X1"		480BS-403		2
38	BEARING BASE		91267-238		2
39	SLOTTED HEX HEAD SCREW, #10-24X3/8"		10-3803		6
42	HEX CAP SCREW, 3/8"-16X5"		91267-237		2
43	SCREW, 1/4"-20X3/8"		635DS-135		8 / 12
44	HEX NUT, 3/8"-16		12-0005		4
45	ROD	60-2550-J		60-2560-D	1

Exploded View: (24 SuperBrush)Drum Head Assembly

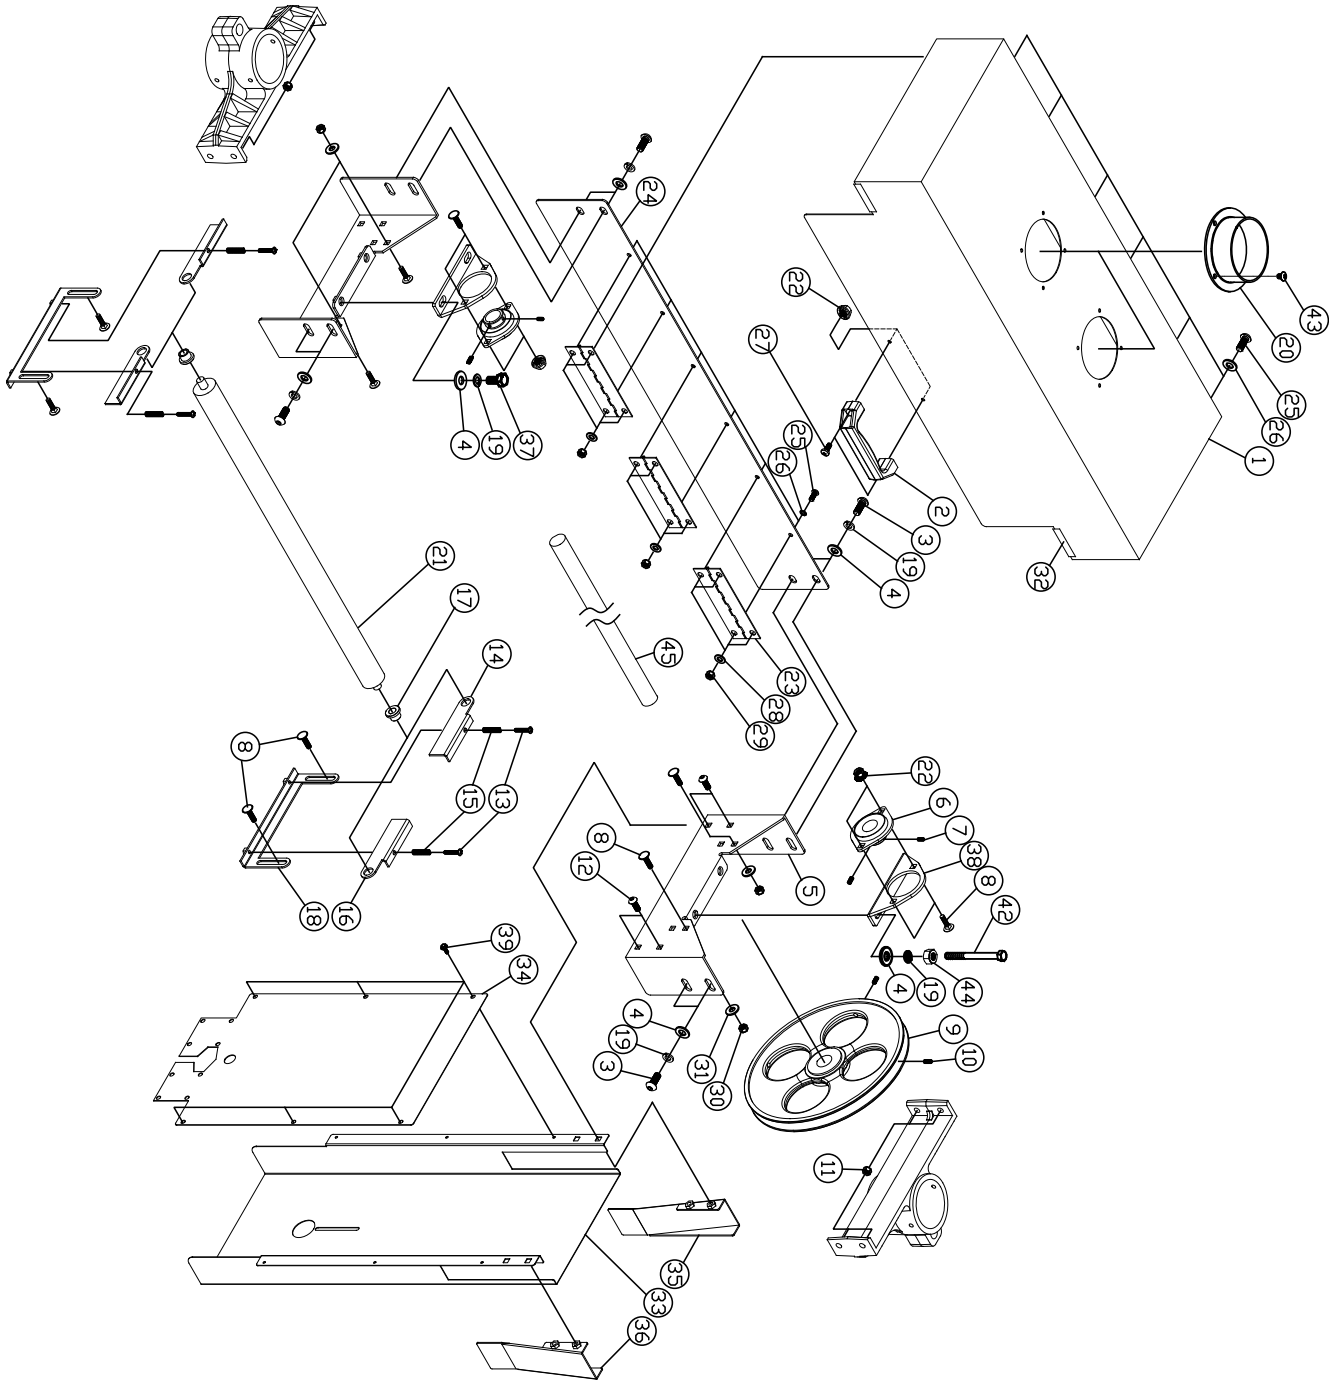

SUPERBRUSH CONVEYOR ASSEMBLY PARTS LIST

Ref. Number	Description	Part Number			Qty../ Unit
		SB24	Both Models	SB36	
1	DRIVEN ROLLER	30-3103		30-3104	1
2	SQUARE OILITE BUSHING, 1/2" I.D.		50-3109		4
3	TAKE UP-SLIDE BRACKET		635DS-328		2
4	LOCK-INT. TOOTH WASHER, 5/16"		11-0505		4
5	HEX NUT, 5/16"-18		12-0003		4
6	WRENCH		635DS-333		2
7	FLAT WASHER, 5/16"		11-0206		6
8	TAKE UP-BASE BRACKET		635DS-335		2
9	HEX CAP SCREW, 3/8"-16X1"		10-0205		16
10	HEX CAP SCREW, 5/16"-18X3"		635DS-337		2
11	NYLON INSERT LOCK NUT, 3/8"-16		12-8005		4
12	SPRING WASHER, 3/8"		20-1165		4
13	SIDE RAIL, RIGHT		40-4144		1
14	ROLLER SUPPORT BRACKET		635DS-338		1
15	DRIVEN ROLLER	30-3106		30-3107	1
16	HEX CAP SCREW, 3/8"-16X3/4"		480BS-177		4
17	FLANGE LOCK NUT, 3/8"-16		12-0209		16
18	CONVEYOR BED	40-4101		40-4201	1
19	SIDE RAIL, LEFT		40-4143		1
20	BOTTOM COVER		40-4116A		1
21	HEX CAP SCREW, 5/8"-11X1"		913002-321		1
22	SLOTTED HEX HEAD SCREW, #10-24X3/8"		10-3803		8
23	BOTTOM COVER		40-4146		1
24	SPEED ADJUSTMANT LABLE		480BS-208		1
25	SWITCH BRACKET		40-0124A		1
26	MAGNETIC SWITCH, 5HP, 1Ph		72-5400-1		1
	MAGNETIC SWITCH, 5HP, 3Ph		72-1311		1
27	STRAIN RELIEF, PG-21		PG-21		1
28	SCREW, M4X0.7X12		913002-328		2
29	STRAIN RELIEF, PG-13.5		PG-13.5		2
30	CORD SET, SINGLE PHASE		913002-330		1
	CORD SET, THREE PHASE		913102-330		1
31	LOCK-EXT. TOOTH WASHER, M5		635DS-350		2
32	KNOB		72-6106-01A		1


SUPERBRUSH CONVEYOR ASSEMBLY PARTS LIST

Ref. Number	Description	SB24	Part Number		Qty../ Unit
			Both Models	SB36	
33	STRAIN RELIEF, 6P-4		PLAREVO1216-190		1
34	FLAT WASHER, 3/8"X20X2t		11-0104		22
35	DC GEAR MOTOR, 180VDC		913003-303		1
36	MAIN CORD SET, SINGLE PHASE MAIN CORD SET, THREE PHASE		91267-336A 93267-336		1
37	HEX CAP SCREW, 5/16"-18X1/2"		10-9101		4
38	CONTROL HOUSING		40-5023A		1
39	CONTROLLER, 180 VDC, VARIABLE SPEED, CONVEYOR		72-1260		1
40	FLAT WASHER, M6		635DS-343		4
41	HEX NUT, M6X1.0		635DS-344		4
42	GUARD, BELT LOWER		40-0011		1
43	SET SCREW, 1/4"-20X1/4"		10-8802		2
44	COUPLING (CONVEYOR)		30-3102		1
45	CARRIAGE BOLT, 5/16"-18X1"		635DS-234		4
46	MOTOR, 5HP, 1Ph MOTOR, 5HP, 3Ph		71-0502 71-1503		1
47	HEX NUT, #10-32UNF		480BS-216		2
48	SPRING WASHER, 5/16"		480BS-167		4
49	LOWER INNER BELT GUARD		40-1000A		1
50	LOCK WASHER, M6		635DS-342		4
51	PULLEY, DRIVE, VARIABLE SPEED		50-0704		1
52	KEY, 1/4"X1/4"X35		91267-352		1
53	HEX NUT, 5/8"-11		913002-364		1
54	STRAIN RELIEF, PG-13.5		PG-13.5-2		2
55	SOCKET HEAD CAP SCREW, M6X1.0X80		93267-2-409		4
56	V-BELT		50-2029-1		1
57	FLAT WASHER, 5/16" I.D. THIN		72-1270-3		1
58	JAM NUT, 5/16"-32UNEF		72-1270-4		1
59	CONVEYOR BELT	635DS-304		61-1007	1
60	GUARD, BELT, ANGLED		40-0012		1
61	SCREW, #10-32UNFX1/2"		480BS-214		2
63	FUSE HOLDER		72-6202-A		1
64	JUNCTION BOX		913003-354		1
65	RUBBER BUSHING, D25		PLAREVO1216-205		1

SUPERBRUSH CONVEYOR ASSEMBLY PARTS LIST

Ref. Number	Description	SB24	Part Number		Qty../ Unit
			Both Models	SB36	
66	SCREW, M4X0.7X6		913003-356		4
67	SCREW, M6X1.0X8		913003-357		4
68	SCREW, M5X0.8X8		913003-361		1
69	CONNECTORS FOR SWITCH BOXES(NO SHOW)		91267-355		2(1Ph) 3(3Ph)
70	CONNECTORS FOR JUNCTION BOXES(NO SHOW)		913003-362		2(1Ph) 3(3Ph)

Exploded View: (24 SuperBrush) Conveyor & Motor Assembly

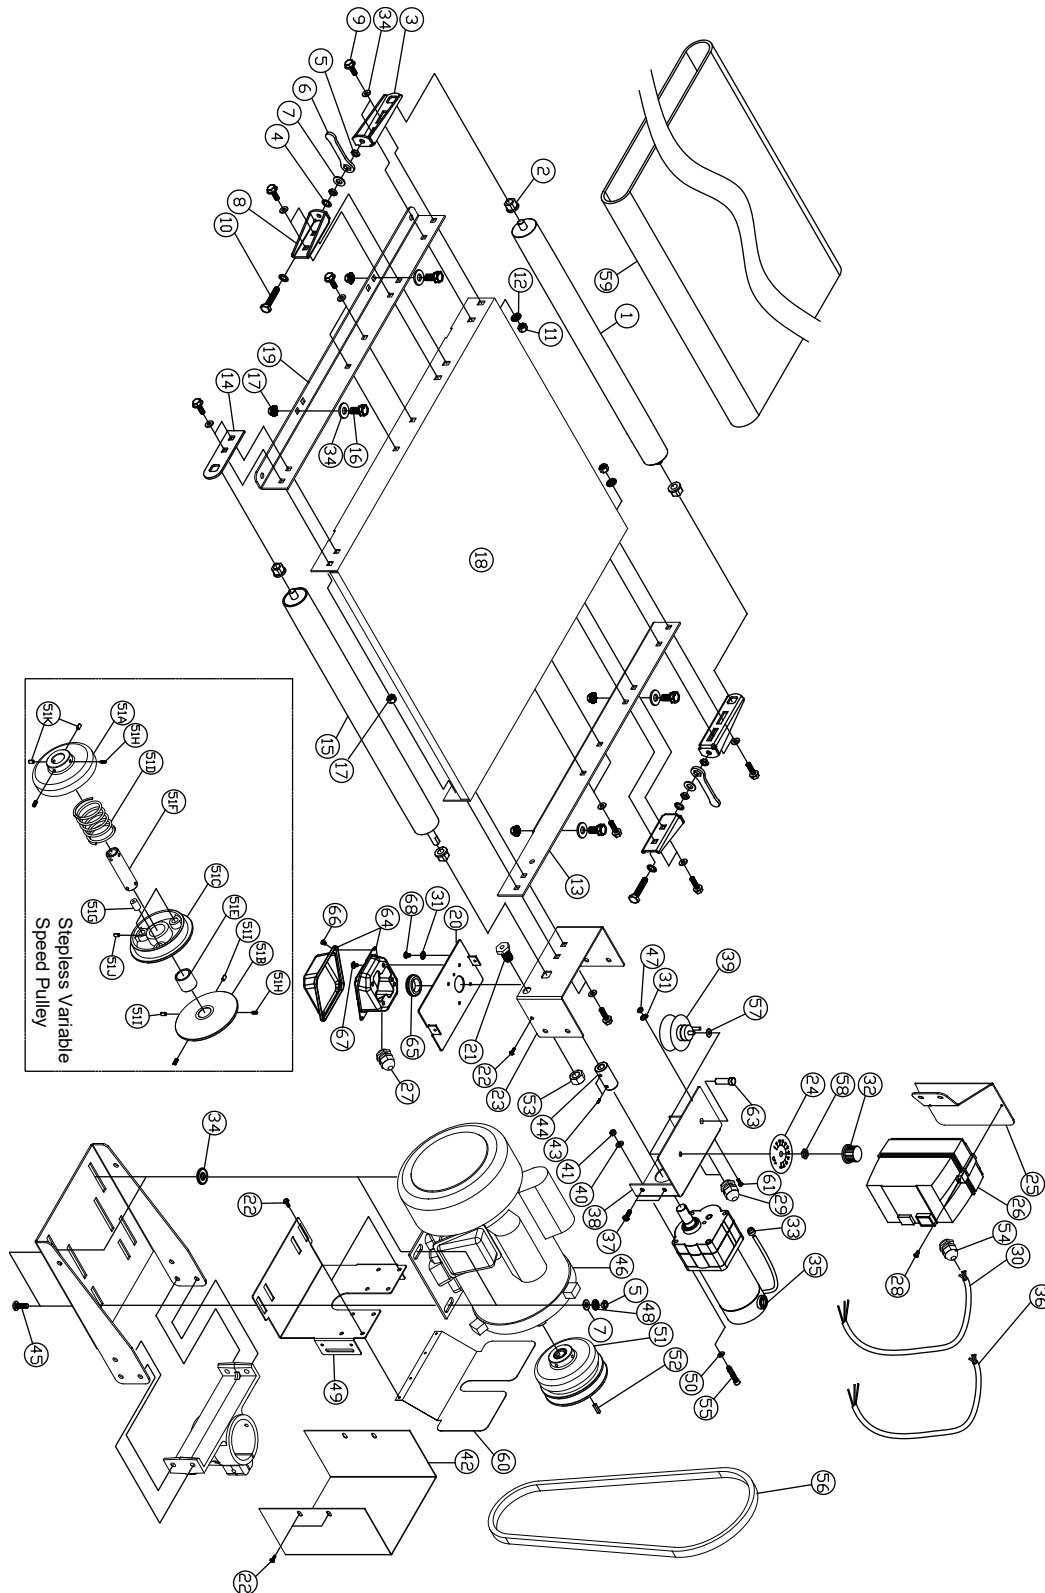

BRUSHES & SUPPLY CHECKLIST

SUPERBRUSH OPTIONS

BRUSHES FOR THE SUPERBRUSH 24 AND SUPERBRUSH 36

DESCRIPTION QTY.

60 Grit, Nylon/Silicon Carbide bristle, Open or Close wound	
80 Grit, Nylon/Silicon Carbide bristle, Open or Close wound	
120 Grit, Nylon/Silicon Carbide bristle, Open or Close wound	
180 Grit, Nylon/Silicon Carbide bristle, Open or Close wound	
220 Grit, Nylon/Silicon Carbide bristle, Open or Close wound	
320 Grit, Nylon/Silicon Carbide bristle, Open or Close wound	
520 Grit, Nylon/Silicon Carbide bristle, Open or Close wound	
Wire, Carbon Steel, Open or Close Wound	
Wire, Stainless Steel, Fineset	
Fladder style Brush combination, (Head Assembly).	
Fladder style Brush combination, (Abrasives only).	
Cloth polishing heads	

These are just a few types of the dozens of brushes available. Please contact Performax Products Inc. for a complete listing of brushes and brush material available or to run test samples of your specific application.

SUPPLIES:

ITEM # DESCRIPTION QTY.

98-0130	Caster Set: Heavy duty, roll & swivel lock.	
98-0025	Lowrider legs with 4 casters. Lowers machine on casters 5 1/2"	

CONVEYOR BELTS

TYPE 1: 100 grit abrasive surface with reinforced film backing.

TYPE 2: Polyurethane rib-textured surface with monofilament backing.

SUPERBRUSH 24	SUPERBRUSH 36		
60-0321	N/A	Type 1: Conveyor with 1" diameter Drive Roller.	
60-0324	60-0337	Type 1: Conveyor with 2" diameter Drive Roller.	
61-1001	N/A	Type 2: Conveyor with 1" diameter Drive Roller	
61-1004	61-1007	Type 2: Conveyor with 2" diameter Drive Roller.	

For information on the SuperBrush and supplies call
800-332-4049 or visit LagunaTools.com

2 YEAR WARRANTY

Limited warranty. We will provide all replacement parts which are found to be defective in materials or workmanship. Manufacturers' warranties on conveyor belts and brush heads.

SAFETY RULES

1. KEEP GUARDS IN PLACE and in working order.
2. REMOVE ADJUSTING KEYS AND WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
3. KEEP WORK AREA CLEAN. Cluttered areas and benches invite accidents.
4. DON'T USE IN DANGEROUS ENVIRONMENT. Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.
5. KEEP CHILDREN AWAY. All visitors should be kept safe distance from work area.
6. MAKE WORKSHOP KID PROOF with padlocks, master switches, or by removing starter keys.
7. DON'T FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
8. USE RIGHT TOOL. Don't force tool or attachment to do a job for which it was not designed.
9. USE PROPER EXTENSION CORD. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table A shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Table A						
Ampere Rating		Volts	Total length of cord in feet			
		120	25	50	100	150
		240	50	100	150	300
More Than	Not More Than		Minimum gage for cord			
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not Recommended	

10. WEAR PROPER APPAREL Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair.
11. ALWAYS USE SAFETY GLASSES. Also use face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses.

12. SECURE WORK. Use clamps or a vise to hold work when practical. It's safer than using your hand and it frees both hands to operate tool.
13. DON'T OVERREACH. Keep proper footing and balance at all times.
14. MAINTAIN TOOLS WITH CARE. Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
15. DISCONNECT TOOLS before servicing; when changing accessories, such as blades, bits, cutters, and the like.
16. REDUCE THE RISK OF UNINTENTIONAL STATING. Make sure switch is in off position before plugging in.
17. USE RECOMMENDED ACCESSORIES. Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury to persons.
18. NEVER STAND ON TOOL Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted.
19. CHECK DAMAGED PARTS. Before further use of the too., a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function - check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
20. DIRECTION OF FEED. Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
21. NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF. Don't leave tool until it comes to a complete stop.

For three phase models:

"The installer shall follow local regulations and National Electrical Code, ANSI/NFPA 70 installation requirements"

**SUPERBRUSH 24**

STOCK NO. 91267

POWER. 230V, 1Ph, 22.4A, 60Hz
400~1200 RPM

SERIAL NO.



Taiwan TCP

**SUPERBRUSH 24**

STOCK NO. 93267

POWER. 230V, 3Ph, 14.4A, 60Hz
400~1200 RPM

SERIAL NO.



Taiwan TCP

**SUPERBRUSH 36**

STOCK NO. 91367

POWER. 230V, 1Ph, 22.4A, 60Hz
400~1200 RPM

SERIAL NO.



Taiwan TCP

**SUPERBRUSH 36**

STOCK NO. 93367

POWER. 230V, 3Ph, 14.4A, 60Hz
400~1200 RPM

SERIAL NO.



Taiwan TCP

WARRANTY & REGISTRATION

Thank You!

Welcome to the Laguna Tools® group of discriminating woodworkers. We understand that you have a choice of where to purchase your machines and appreciate the confidence you have in the Laguna Tools® brand.

Through hands-on experience, Laguna Tools® is constantly working hard to make innovative, precision products. Products that inspire you to create works of art are a joy to operate and encourage your best work.

Laguna Tools®
Imagination, Innovation, and Invention at Work

Warranty & Registration

Every product sold is warranted to be free of manufacturer's defective workmanship, parts, and materials. For any questions about this produce, the intended use or what it was designed for, customer service, or replacement parts, please contact our customer service department:

Laguna Tools® Customer Service
744 Refuge Way, Grand Prairie, Texas 75050, USA
1-800-234-1976
www.lagunatools.com/why/customer-service/
8AM. To 5PM PSF. Monday through Friday

For warranty claims or to report damage upon receiving-please reach out to our warranty department:

Laguna Tools® Warranty Service
744 Refuge Way, Grand Prairie, Texas 75050, USA
1-800-234-1976
www.lagunatools.com/policies/warranty
8AM to 5PM PST, Monday through Friday

Registration

To prevent voiding this warranty, all products sold must be registered within thirty (30) days of receiving the product. Registering the product will enable the original purchaser to receive notifications about important product changes, receive customer service, and be able to file a warranty claim against defective workmanship, parts, or materials.



Who is Covered

The applicable warranty covers only the initial purchaser of the product from the date of receiving the product. To file such claims, the original purchaser must present the original receipt as proof of purchase.

What is Covered

The warranty covers any defects in the workmanship of all parts and materials that make up the machine unless otherwise specified. Any part determined by Laguna Tools® to have a defect will be repaired or replaced (and shipped), without charge. The defective item/part must be returned to Laguna Tools® with the complaint and proof of purchase in the original packaging that it was received in. In the event the item/part is determined to be not covered by this warranty, the customer will be responsible for the cost to replace the item/part and all related shipping charges.

Warranty Limitations

This limited warranty does not apply to natural disasters, acts of terrorism, normal wear and tear, product failure due to lack of maintenance or cleaning, damage caused by accident, neglect, or lack-of inadequate dust collection. The warranty may be voided against proof of misuse/abuse, damage caused where repair or alterations have been made or attempted by others, using the product for purposes other than those described as intended use (unless with consent by Laguna Tools®), modification to the product, or use with an accessory that was not designed for the product. It is the responsibility of the user to understand basic woodworking machinery settings and procedures and to properly maintain the equipment in accordance with the standards provided in this manual.

Length of Warranty

All new machines and optional accessories sold through an authorized dealer carry a two-year warranty effective from the date of receiving the product. Machines sold for either commercial or industrial use have a one-year warranty. Wearable parts like throat plates, bandsaw guides, etc., have a ninety-day warranty.

Table A-1 Warranty Lengths

2 Year – New Machines Sold Through an Authorized Dealer
2 Year – Accessories Sold as Machine Options (excluding blades)
1 Year – Machines Sold for Commercial or Industrial Use
1 Year – Blades and Accessories outside or Machine Options
90 Days – Wearable Parts

Aside from being free of defects upon receiving, consumable parts, like cutters and abrasives, are not covered by this warranty unless otherwise stated by Laguna Tools®. These parts are designed to be used at the expense of the operator and are available for replacement or inventory purchase. The determination of a consumable part will be made on a case-by-case basis by Laguna Tools®.

Shipping Damage

Laguna Tools® is not responsible for damage or loss caused by a freight company or other circumstances not in the direct control of Laguna Tools®. All shipping-related claims for loss or damage to goods must be made to Laguna Tools® within twenty-four hours of delivery.

How to Receive Support

To file a warranty claim, please contact the warranty department at 1-800-234-1976. To receive customer service or technical support, please contact the customer service department at 1-800-332-4094. Parts, under warranty, are shipped at the expense of Laguna Tools® either by common carrier, FedEx ground services, or similar method. Technical support to install replacement parts is primarily provided by phone, fax, email, or the Laguna Tools® Customer Service Support Website.

LAGUNA

THIS PAGE INTENTIONALLY LEFT BLANK

CAUTION: **IMPORTANT SAFETY INFORMATION**

FOR SAFE SANDING OPERATION, FOLLOW THESE GUIDELINES:

- **BECOME FAMILIAR WITH THE PROPER OPERATIONAL PROCEDURES FOR USING THIS MACHINE.**
- **ALWAYS BE SAFETY CONSCIOUS WHEN OPERATING THE MACHINE.**
- **ALWAYS WEAR EYE PROTECTION WHILE OPERATING THE SANDER.**
- **ALWAYS FEED STOCK AGAINST THE ROTATION OF THE BRUSH**
- **NEVER PLACE HANDS UNDER THE BRUSH OR DUST COVER.**
- **NEVER OPERATE SUPERBRUSH WITHOUT ITS DUST COVER OR PULLEYGUARD IN PLACE.**
- **KEEP HANDS AND CLOTHING AWAY FROM OPERATING BRUSH BELT AND PULLEYS.**
- **ALWAYS MAINTAIN CONTROL OF STOCK TO AVOID KICKBACK; KNOW HOW TO PREVENT IT.**
- **ALWAYS DISCONNECT ELECTRICAL POWER BEFORE PERFORMING ANY SERVICING OR ADJUSTMENT OF THE MACHINE.**
- **DO NOT MODIFY THIS MACHINE: MODIFICATIONS ARE DONE AT THE OWNER'S RISK AND ALSO WILL VOID THE MANUFACTURER'S WARRANTY.**
- **FOR CUSTOMER SERVICE AND QUESTIONS ABOUT THE OPERATION OR MAINTENANCE OF THIS MACHINE, PLEASE CALL YOUR AUTHORIZED SUPERMAX DEALER.**

Lagunatools.com
800-332-4094