

We're catching up with the changes that CNC manufacturers are making in their machines.

Here are the instructions:



Since Carbide decided to switch to the Warthog controller, the connection requires opening up the controller box, and connecting directly to the PCB.

We're working with Carbide on the official connection, but for now please follow these steps:


I. Disconnect the controller from the power supply. Open the box by unscrewing the screws on the outer frame.



II. Locate the ICSP pins on the PCB. Connect the PWM (red) cable to the lower middle pin, and GND (blue) cable to the lower left pin.

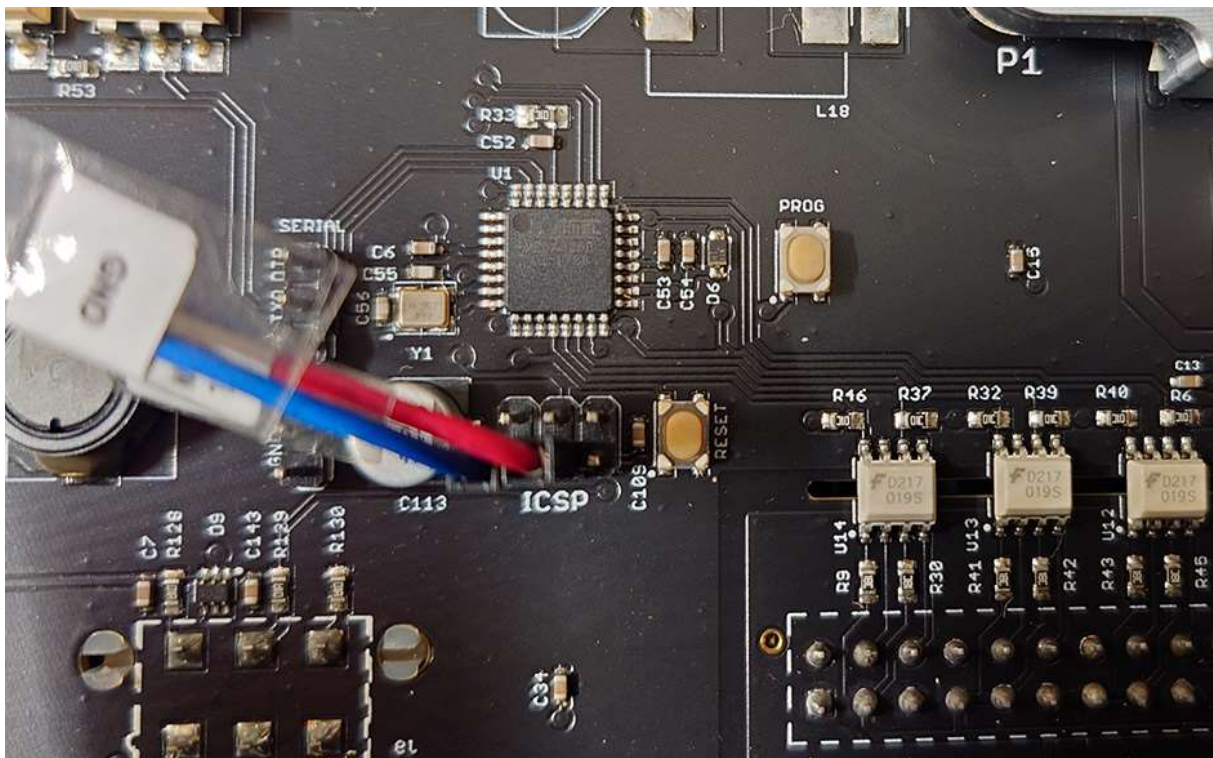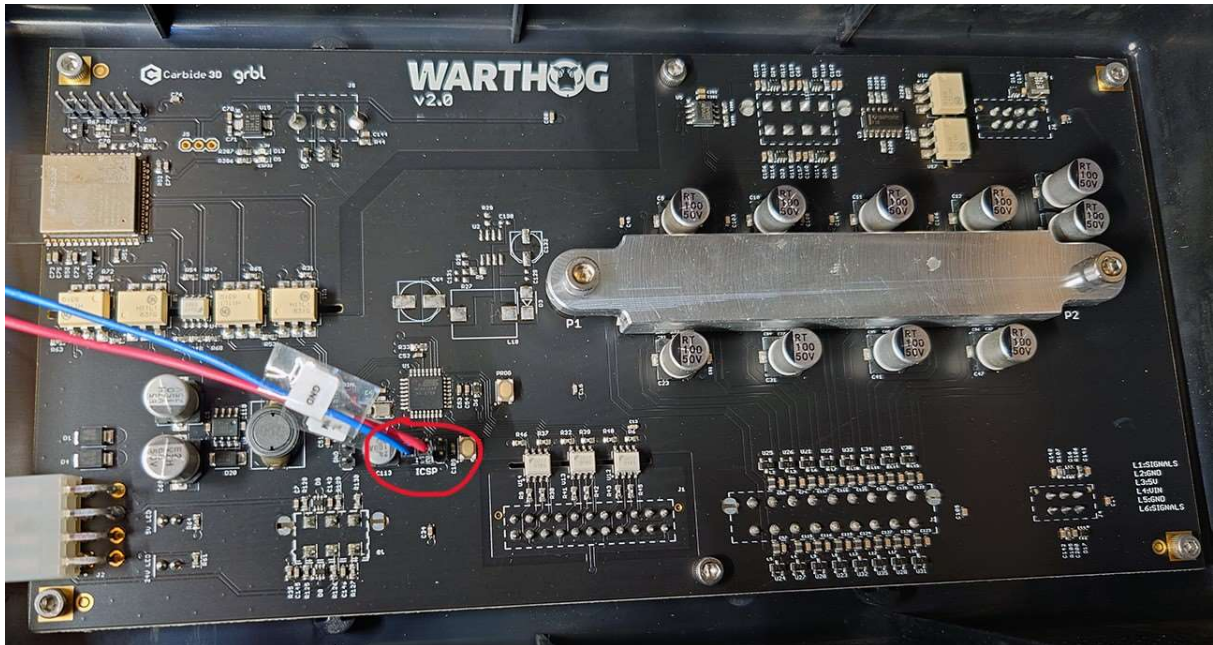

III. You can run the signal cables through the power plug opening, through the bottom of the box, or through the ventilation holes in the front.

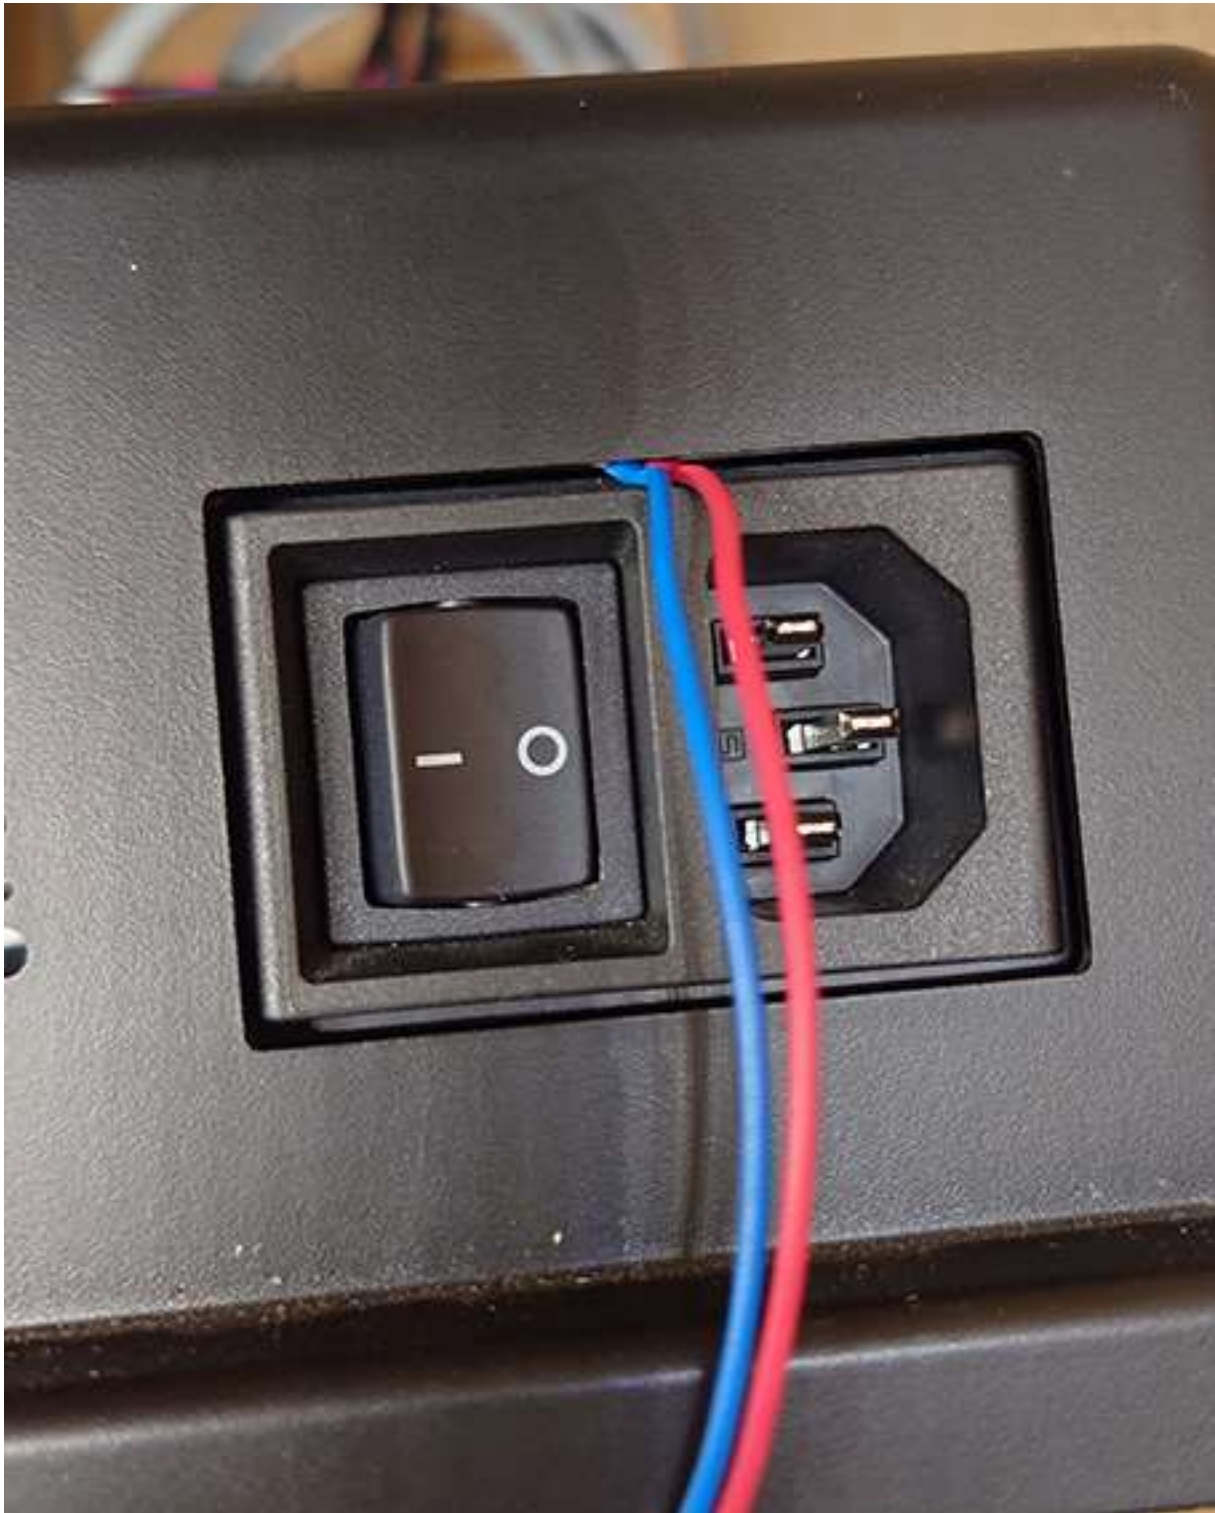

When screwing the screws back in, do not tighten them too much as this could damage the wires.